

# SF MODEL FURNACES

Use this chart to determine the correct core replacement.

IF YOU HAVE THIS MODEL	ORDER THIS REPLACEMENT CORE
<b>SF-20</b>	<b>CORE</b>
2324	STOCK #: 2605A MODEL #: RP-20Q
2381	
<b>SF-20Q</b>	<b>CORE</b>
2382	STOCK #: 2605A MODEL #: RP-20Q
2385	
2386	
<b>SF-20F</b>	<b>CORE</b>
2329	STOCK #: 2606A MODEL #: RP-20FQ
<b>SF-20FQ</b>	<b>CORE</b>
2389	STOCK #: 2606A MODEL #: RP-20FQ
2465	
<b>SF-25</b>	<b>CORE</b>
2320	STOCK #: 2607A MODEL #: RP-30Q
2325	
<b>SF-25Q</b>	<b>CORE</b>
2383	STOCK #: 2607A MODEL #: RP-30Q
2387	
<b>SF-25F</b>	<b>CORE</b>
2330	STOCK #: 2608A MODEL #: RP-30FQ
<b>SF-25FQ</b>	<b>CORE</b>
2390	STOCK #: 2608A MODEL #: RP-30FQ
2467	

IF YOU HAVE THIS MODEL	ORDER THIS REPLACEMENT CORE
<b>SF-30</b>	<b>CORE</b>
2321	STOCK #: 2607A MODEL #: RP-30Q
2326	
2376	
<b>SF-30Q</b>	<b>CORE</b>
2384	STOCK #: 2607A MODEL #: RP-30Q
2388	
2481	
2488	
<b>SF-30F</b>	<b>CORE</b>
2331	STOCK #: 2608A MODEL #: RP-30FQ
<b>SF-30FQ</b>	<b>CORE</b>
2391	STOCK #: 2608A MODEL #: RP-30FQ
2469	
2484	
<b>SF-35</b>	<b>CORE</b>
2322	STOCK #: 2609A MODEL #: RP-35Q
2327	
<b>SF-35Q</b>	<b>CORE</b>
2398	STOCK #: 2609A MODEL #: RP-35Q
2414	
<b>SF-35F</b>	<b>CORE</b>
2302	STOCK #: 2610A MODEL #: RP-35FQ
2332	
<b>SF-35FQ</b>	<b>CORE</b>
2400	STOCK #: 2610A MODEL #: RP-35FQ

IF YOU HAVE THIS MODEL	ORDER THIS REPLACEMENT CORE
<b>SF-42</b>	<b>CORE</b>
2323	STOCK #: 2609A MODEL #: RP-35Q
2328	
<b>SF-42Q</b>	<b>CORE</b>
2399	STOCK #: 2609A MODEL #: RP-35Q
2415	
2415	
2482	
<b>SF-42F</b>	<b>CORE</b>
2333	STOCK #: 2610A MODEL #: RP-35FQ
<b>SF-42FQ</b>	<b>CORE</b>
2401	STOCK #: 2610A MODEL #: RP-35FQ