

Classic Portable Ice Maker

Makes 12 kg / 26.5 lbs or
more ice in 24 hours



Intertek

OWNER'S MANUAL
PLEASE READ AND SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS AND KEEP THIS BROCHURE FOR FUTURE REFERENCE.

The Classic Portable Ice Maker is designed for household use only. Use only for making ice, do not use to chill drinks or keep food cold.

Before the first use, remove all packaging and clean the machine with a soft cloth, vinegar and warm water. Make sure to rinse well with fresh water. The ice maker should be unplugged when you clean it. Avoid using powders, harsh detergents, solvents or boiling water when cleaning machine. Discard the first and second batch of ice. Allow 1 hour for the refrigerant fluid to settle before starting.

Do not attempt to repair this machine yourself, have a qualified technician do the repairs or return to an authorized dealer.

IMPORTANT SAFETY INSTRUCTIONS:

1. This appliance must be grounded. Connect only to properly grounded outlet. No other appliance should be plugged into the same receptacle.
2. The ice maker should be located on a level, flat and secure surface.
3. To protect against electric shock, do not place the cord or appliance in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug appliance when not in use.
6. Do not operate the appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
7. The appliance should only be serviced by qualified service personnel.
8. Do not cover or block any opening or air vents on the appliance. Allow a 15 cm / 6" clearance on all sides for ventilation.
9. Warning: Do not touch the evaporator when the ice maker is on, it may burn your skin.
10. Do not store or use the appliance outdoors.
11. Do not place the appliance near heat sources dishwasher, stove, kettle, direct sunlight or open flames.
12. Do not place heavy objects on top of the appliance.
13. Keep the ice maker in an upright position even during transportation.


MAINTENANCE AND CLEANING:

Always unplug the machine before cleaning. Clean the machine with a soft cloth, vinegar and warm water. Make sure to rinse it well with fresh water. Dry the unit off with a soft clean cloth. Avoid use of powders, harsh detergents, solvents or boiling water to clean this machine.

Keep the door closed to save the ice.

Do not use to store food or drinks. Use this for its intended purpose only.

OPERATING INSTRUCTIONS:

Push the power button  to turn the machine on or off. Once the machine is on, allow 30 minutes for the unit to cool. Then fill the water reservoir with cold water.

The indicator lights will also show when to fill water or when the ice is full. If the power is interrupted three indicator lights will flicker. If this occurs turn the machine off and unplug it and try again after 3 minutes or move to a different receptacle. When the ice full light is on empty the ice basket and restart. Do not allow the ice basket to overflow.



TROUBLE SHOOTING

Problem	Cause	Solution
Not making ice.	No power at receptacle.	Check receptacle.
	Plug not fully inserted.	Insert plug fully.
	Switch is off.	Switch on.
	Fuse is burnt or breaker has been tripped.	Replace fuse or reset breaker.
	Ventilation fan is blocked.	Ensure that fan is clear.
Ice shovel is jammed.	Temperature where the unit is situated is too hot.	Change location of unit (away from heat source).
	The ice basket has overflowed.	If ice is caught under the ice shovel allow the ice to melt then restart the machine.
Machine is noisy.	Ice maker is not level.	Reposition it on a level surface.
	The fan is blocked.	Ensure that there is proper clearance for ventilation.

NOTE: The refrigeration unit is noisy this is normal. When the icemaker is working the evaporator and compressor do get hot.

Classic

ONE YEAR WARRANTY - VALID ONLY WITH ORIGINAL PURCHASE RECEIPT

WARRANTY: Home Hardware Stores Limited warrants this product against defects in any parts or workmanship for a period of 1 year from the original purchase date. This product is for residential use only. It is not intended to be used in commercial or industrial settings. This product warranty covers only the original consumer purchaser of the product.

WARRANTY COVERAGE: This warranty is void if the product has been damaged by accident, neglect, improper handling or operation, shipping damage, abuse, misuse, unauthorized repairs made or attempted, alterations, improper assembly/installation or maintenance, commercial use or other causes not arising out of defect in materials or workmanship. This warranty does not extend to any units which have been altered or modified or to damage to products or parts there of which have had the serial number removed, altered, defaced or rendered illegible. Return to the closest Home Hardware store for inspection and/or replacement.

IMPLIED WARRANTIES: Any implied warranties which the purchaser may have are limited in duration to 1 year from the date of purchase. This limited warranty is in lieu of all other warranties expressed or implied, including warranties of merchantability and fitness for a particular purpose and excludes all liability for incidental or consequential damages for any cause whatsoever.

WARRANTY PERFORMANCE: During the above 1 year warranty period, a product with a defect will be replaced when the product is returned to an authorized dealer. The replacement product will be in warranty for the balance of the 1 year warranty period and an additional one month period. No charge will be made for such replacement.

MADE IN CHINA / FABRIQUÉ DE CHINE

HOME HARDWARE STORES LIMITED

ST. JACOBS, ONTARIO N0B 2N0

www.homehardware.ca

3760W758

© 02 / 2014 Home Hardware Stores Limited