 




Tower Fan

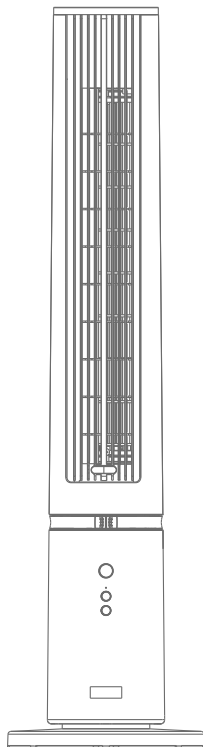

Owner's Manual

Please Read and Save These Instructions



This OMNI Max™ product carries a one (1) year LIMITED warranty against defects in workmanship and materials.
Cet article OMNI Max™ comporte une garantie LIMITÉE d'un (1) an contre les défauts de fabrication et de matériaux.



IMPORTANT SAFETY INSTRUCTIONS	2
PRODUCT INTRODUCTION	5
OPERATION INSTRUCTIONS	8
CLEANING AND MAINTENANCE	9
USER SERVICING INSTRUCTIONS	11
PRODUCT PARAMETERS	11
TROUBLESHOOTING	12

IMPORTANT INSTRUCTIONS

CAUTION-Read Rules for Safe Operation and Instructions Carefully.

WARNING:

1. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
2. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
3. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
4. When the fan was assembled, the rotor blade guard shall not be taken off anymore.
5. The appliance is only to be used with the power supply unit provided with the appliance.
6. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way.
7. If the plug does not fit fully in the outlet, reverse the plug.
8. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT INSTRUCTIONS

9. **WARNING**—To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

10. This product employs overload protection (fuse).

11. A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

a) Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.

b) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

Do not leave the fan running unattended.

To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g., parts made at home using a 3D printer).


 **CAUTION:**

 1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

IMPORTANT INSTRUCTIONS

2. Children should be supervised to ensure that they do not play with the appliance.
3. Never insert fingers, pencils, or any other object through the grille when fan is running.
4. Disconnect fan when moving from one location to another.
5. Be sure fan is on a stable surface when operating to avoid overturning.
6. Keep electrical appliances out of reach from children or infirm persons. Do not let them use the appliances without supervision.
7. Household use only.
8. This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:
 - (1) This device may not cause interference; and
 - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
9. The fan shall not be modified by user. such as by adding supplemental filters to fans not intended to be used for air cleaning purposes.


PRODUCT INTRODUCTION

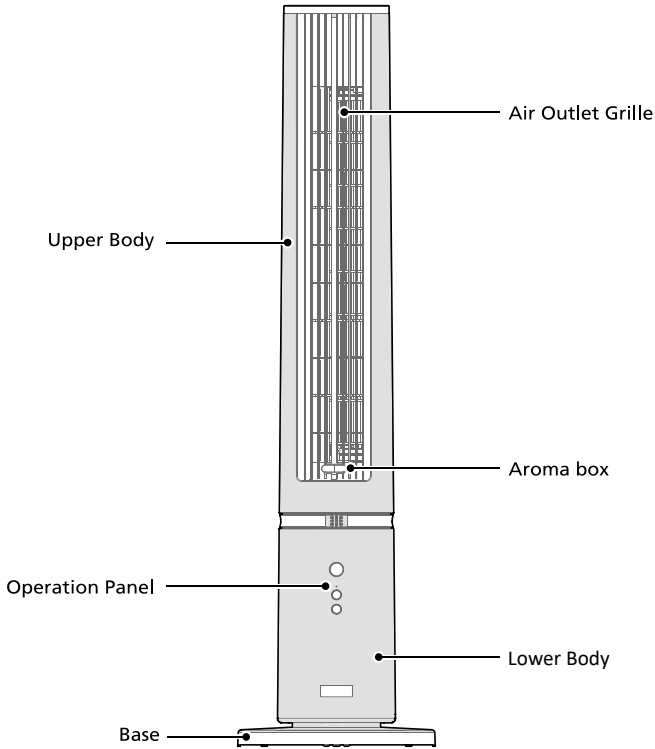


PRODUCT INTRODUCTION

Chassis Installation Method

 - 1 Unpack the box, take out the base and chassis, turn the base upside down, pass the power cord through the middle round hole of the chassis, and then fix the base and chassis with a lock nut.

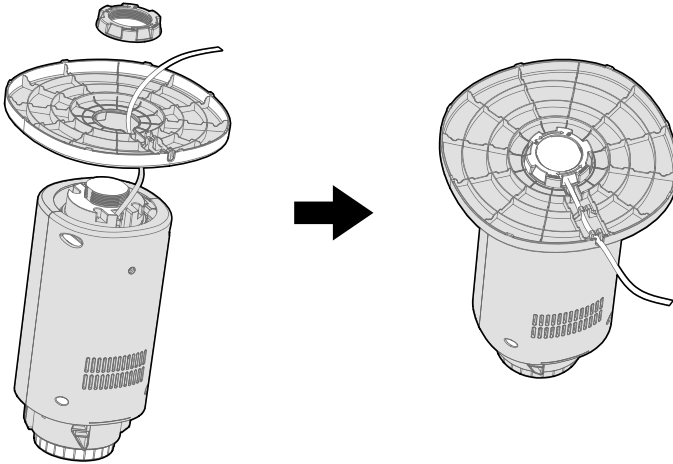

 
- 2 Press the power cord down along the chassis wire groove, so that the power cord is completely stuck in the slots at both ends of the wire groove.

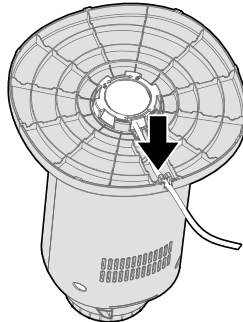




PRODUCT INTRODUCTION

 Body Installation

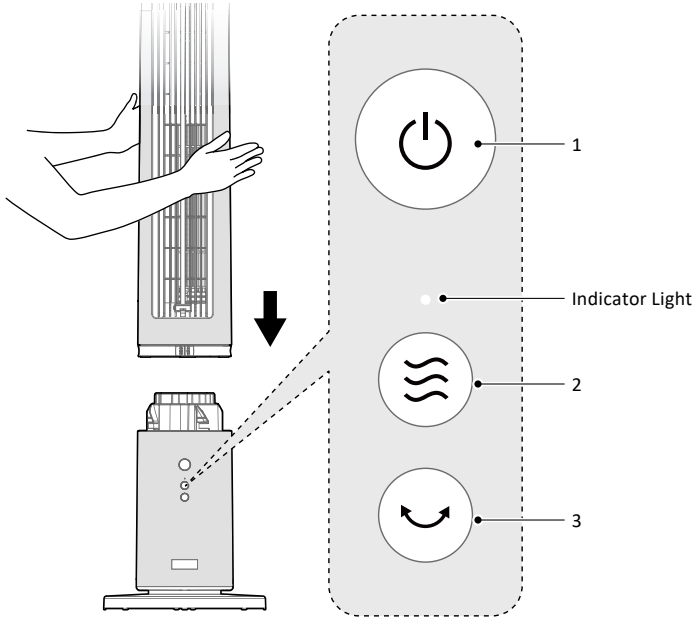
Place the base on a stable ground, pick up the body and align the air outlet side of the body with the side of the base switch, then press the body vertically downward and slightly hard to make the machine perpendicular to the ground, and the machine installation completes.



No	Button	Description												
1	 On/Standby button	<ul style="list-style-type: none"> Click the button to turn on or off the power 												
2	 Wind speed button	<ul style="list-style-type: none"> Click the button to cycle through wind speed 1-2-3-4 Wind speed indicator light effect, O indicates on: <table border="0" style="margin-left: 20px;"> <tr> <td>Speed 1</td> <td>Speed 2</td> <td>Speed 3</td> <td>Speed 4</td> </tr> <tr> <td>1 2 4</td> <td>1 2 4</td> <td>1 2 4</td> <td>1 2 4</td> </tr> <tr> <td>○ ● ●</td> <td>● ○ ●</td> <td>○ ○ ●</td> <td>● ● ○</td> </tr> </table> 	Speed 1	Speed 2	Speed 3	Speed 4	1 2 4	1 2 4	1 2 4	1 2 4	○ ● ●	● ○ ●	○ ○ ●	● ● ○
Speed 1	Speed 2	Speed 3	Speed 4											
1 2 4	1 2 4	1 2 4	1 2 4											
○ ● ●	● ○ ●	○ ○ ●	● ● ○											
3	 Oscillation button	<ul style="list-style-type: none"> Click the button to turn on or off the swing function 												

 OPERATION INSTRUCTIONS



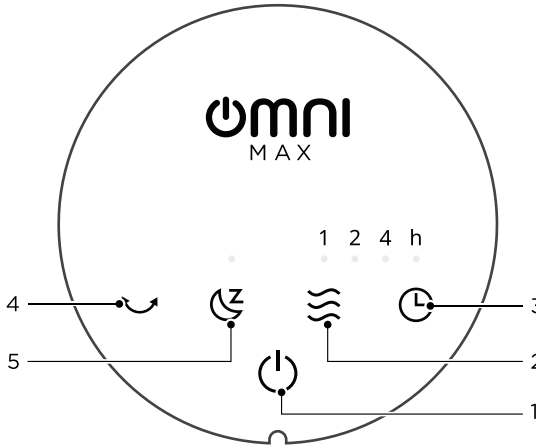


Description of Remote Control Buttons



- The remote controller should be normally used within 5m of the front of the product .
- The battery contains many heavy metals, acids and bases, etc., which may threaten human's health; Waste batteries should be recycled separately.

NOTE

- Please use a manganese or alkaline battery of type "AAA" and do not use a non-recyclable battery. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.

No	Button	Description																								
1	 On/Standby button	<ul style="list-style-type: none"> • Click the button to turn on or off the power 																								
2	 Wind speed button	<ul style="list-style-type: none"> • Click the button to cycle through wind speed 1-2-3-4 • Wind speed indicator light effect, O indicates on: <table border="0" style="margin: 10px auto; text-align: center;"> <tr> <td>Speed 1</td> <td>Speed 2</td> <td>Speed 3</td> <td>Speed 4</td> </tr> <tr> <td>1 2 4</td> <td>1 2 4</td> <td>1 2 4</td> <td>1 2 4</td> </tr> <tr> <td>○ ● ●</td> <td>○ ● ●</td> <td>○ ● ●</td> <td>○ ● ●</td> </tr> </table> 	Speed 1	Speed 2	Speed 3	Speed 4	1 2 4	1 2 4	1 2 4	1 2 4	○ ● ●	○ ● ●	○ ● ●	○ ● ●												
Speed 1	Speed 2	Speed 3	Speed 4																							
1 2 4	1 2 4	1 2 4	1 2 4																							
○ ● ●	○ ● ●	○ ● ●	○ ● ●																							
3	 Timer button	<ul style="list-style-type: none"> • Click the button to set the timer in the range of 1-7 hours • Schedule time indicator light effect, O indicates on: <table border="0" style="margin: 10px auto; text-align: center;"> <tr> <td>1h</td> <td>2h</td> <td>3h</td> <td>4h</td> </tr> <tr> <td>1 2 4 h</td> <td>1 2 4 h</td> <td>1 2 4 h</td> <td>1 2 4 h</td> </tr> <tr> <td>○ ● ● ○</td> <td>○ ● ● ○</td> <td>○ ● ● ○</td> <td>○ ● ● ○</td> </tr> <tr> <td>5h</td> <td>6h</td> <td>7h</td> <td></td> </tr> <tr> <td>1 2 4 h</td> <td>1 2 4 h</td> <td>1 2 4 h</td> <td></td> </tr> <tr> <td>○ ● ○ ○</td> <td>○ ● ○ ○</td> <td>○ ● ○ ○</td> <td></td> </tr> </table> 	1h	2h	3h	4h	1 2 4 h	1 2 4 h	1 2 4 h	1 2 4 h	○ ● ● ○	○ ● ● ○	○ ● ● ○	○ ● ● ○	5h	6h	7h		1 2 4 h	1 2 4 h	1 2 4 h		○ ● ○ ○	○ ● ○ ○	○ ● ○ ○	
1h	2h	3h	4h																							
1 2 4 h	1 2 4 h	1 2 4 h	1 2 4 h																							
○ ● ● ○	○ ● ● ○	○ ● ● ○	○ ● ● ○																							
5h	6h	7h																								
1 2 4 h	1 2 4 h	1 2 4 h																								
○ ● ○ ○	○ ● ○ ○	○ ● ○ ○																								
4	 Oscillation button	<ul style="list-style-type: none"> • Click the button to turn on or off the swing function 																								
5	 Sleep wind button	<ul style="list-style-type: none"> • Click the button to turn on or off the sleep wind 																								

CLEANING AND MAINTENANCE

 
NOTE

- Before cleaning this product, be sure to turn off the power and unplug it.
- After cleaning and maintenance, be sure to wait until it is fully dry before powering on or storing it.
- Do not rinse the base directly with water. You can gently wipe the surface with a soft cloth containing a little neutral detergent and then wipe it dry. Do not use solvents such as gasoline.
- Do not disassemble the product for modification. It is recommended to check and clean this product regularly to extend its service life.

Disassembly and Cleaning Method

How to disassemble the body and the base


Before disassembling the body and the base, please turn off the power and unplug, then push the lock on the front of the body to the far right, hold the handle hole on the back of the body and pull it up vertically to separate the body from the base.

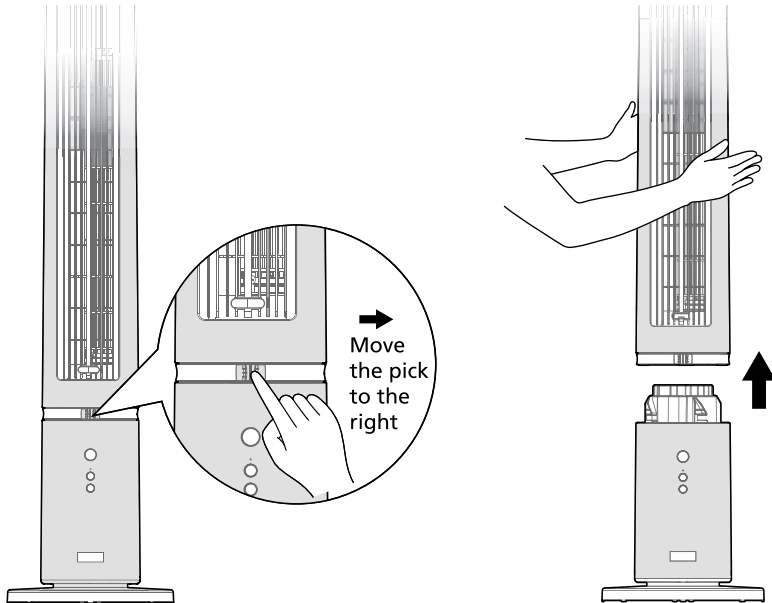

CLEANING AND MAINTENANCE


How to Disassemble the Chassis

 Turn the base upside down, as shown in the figure below, push the chassis buckle inward, and then rotate the chassis counterclockwise to remove the chassis.

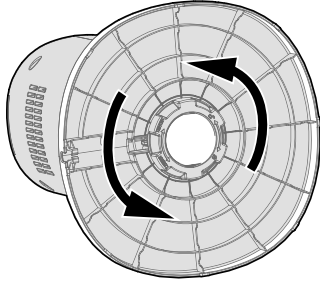

Cleaning Method

 Put the body flat and rinse it up and down and front and back with a faucet or shower. After rinsing, gently shake the water out of the body or let it stand until the water is drained before installation and powering on.

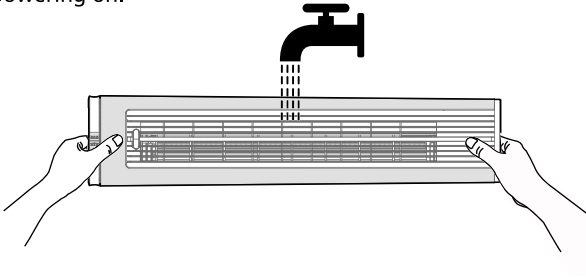


● NOTE

When cleaning the body, make sure it is separated from the base.

USER SERVICING INSTRUCTIONS

 - a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades. (Fig.①)
- c) Remove fuse carefully. Insert the tip of your tool into fuse slot(close with the terminal), then pry the fuse gradually and slowly, but not overexert. If you feel tight, you can try it at several times and pry the fuse little by little. When one side of the fuse has been pried, then you can get the fuse out entirely. (Fig.②)
- d) Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse. (Fig.③)
- e) Close fuse cover. Slide close the fuse access cover on top of attachment plug. (Fig.④)
- f) Risk of fire. Do not replace attachment plug. Contains a safety device(fuse)that should not be removed. Discard product if the attachment plug is damaged.
- g) When the fan suddenly does not work during normal operation, please check whether it is a problem with the fuse.

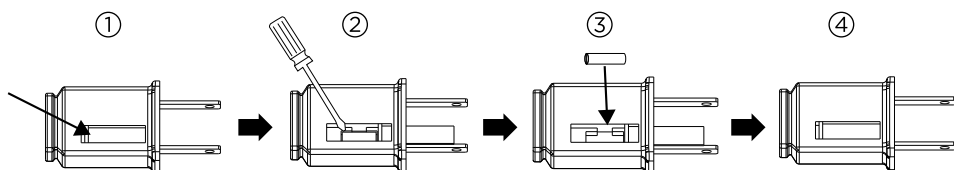

NOTE

- When you replace the fuse, please don't operate suddenly or overexert, or else the product will be damaged or cause accident.
- When you feel it hard to be operated, please make sure you have got the right way.

PRODUCT PARAMETERS

Model	Voltage	Frequency	Power
3828-008	120V~	60Hz	45W

TROUBLESHOOTING

The following table contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save your time and money that may cost for calling to the service center.

Problem	Cause	Solution
The machine does not work properly after installed	• The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the socket.
	• The switch on the body is not turned on.	Turn on the switch on the body.