

Classic
Ceramic Heater
With Oscillating function



3836W524



750/1500 W 120 V AC, 60 Hz

OWNER'S MANUAL

READ AND SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Portable electric heaters are designed for spot heating or as a supplementary heat source. They are not intended to be the main source of heat during the normal heating season.

IMPORTANT INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS HEATER
NOTE: There may be a trace of smoke or odour when unit is first started. Do not be alarmed. This indicates that a drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not re-occur. Make sure that the room in which the appliance is located is well ventilated during this operation. It is normal for the appliance to emit small cracking sounds when you turn it on for the first time. Do not be alarmed.

When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electrical shock and injury to persons or property, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet / 0.9 m from the front and top of the heater and keep them away from the sides and rear. Keep the rear grille away from walls or drapes so as not to block the air intake.
3. Extreme caution is necessary when any heater is used by or near children or the disabled and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions or has been dropped or damaged in any manner.

6. Do not use outdoors. This product is intended for normal household use only.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs or runners. Arrange cord away from high traffic areas where it will not be tripped over. Route the cord so that it will not be walked on, or pinched by furniture.
9. To disconnect the heater, turn control to "OFF", then remove the plug from outlet.
10. Connect to properly polarized outlets only.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage to the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. The heater has hot or arcing or sparking pads inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
14. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, injury to persons or damage to property.
15. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet or into another outlet wired into the same circuit.
16. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets should be replaced prior to further use of the heater. Plugging heater into a worn outlet may result in overheating of the power cord or fire.
17. Ensure the heater is on a stable, secure surface to eliminate the potential of it tipping over.
18. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
19. Be sure that the plug is fully inserted into the appropriate outlet. Periodically check that your outlet is in good condition to avoid overheating or deformation of the plug.
20. Check that neither the appliance or the power cable has been damaged in any way during transportation.
21. Make sure that no pieces of polystyrene or other packaging material has been left on the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
22. When switching on the appliance for the first time, you may notice a slight odour which is normal with new electrical appliances. Allow odour to dissipate by running appliance at full power for about ten minutes. Make sure that the room in which the appliance is located is well ventilated during this operation. This heater draws 12.5 A during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
23. Do not run in locations when the heater will be left unattended for long periods of time.
24. Do not use attachments or filters.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

SAFETY FEATURES OF THIS HEATER

Safety Grilles: The heater is equipped with safety grilles at the front to protect the heating element. This part of the heater can get extremely hot. Do not block this grille as it could cause a fire.

Thermal Cut-Off: The heater will automatically shut off when parts of it overheat. If this occurs, turn the heater OFF and unplug it. Inspect the unit, and remove any objects that are on or adjacent to the unit that may cause overheating. Wait 15-20 minutes for the unit to cool down. Then plug it back into the outlet to resume normal operation.

Tip Over Switch: The built-in tip over switch will turn the heater off if the unit is accidentally knocked over. To reset, stand heater upright and wait a few seconds for it to begin operating again.

MADE IN CHINA / FABRIQUÉ EN CHINE
HOME HARDWARE STORES LIMITED
ST. JACOBS, ONTARIO N0B 2N0
ORDER ONLINE / COMMANDE EN LIGNE
homehardware.ca
© 03 / 2017 Home Hardware Stores Limited

OPERATING INSTRUCTIONS

To operate, connect to a properly polarized outlet only. Match wide blade of plug to wide slot and fully insert. Be sure to plug into a 120 V AC, 60 Hz outlet. YOUR HEATER IS EQUIPPED WITH 4 CONTROL SETTINGS AND THERMOSTAT CONTROL.

CONTROL PANEL	SYMBOL	FUNCTION
	⏻ (OFF)	Power off
	🌀 (FAN)	Fan only setting
	⬇️ (LOW)	Low heat (750 W)
	⬆️ (HIGH)	High heat (1500 W)
	⊕ ⊖	Thermostat temperature control
	😊	Oscillation control

Set the power and setting control switch to ⬆️ to quickly warm-up a room. Once the room is comfortable, select a lower power setting to prevent the room from becoming too warm.

TEMPERATURE SETTING

Thermostat Function: Adjust the thermostat to maximum ⊕ and select the desired power setting. Once the room is comfortable, rotate the thermostat counterclockwise ⊖, until the heater shuts off. The thermostat will now maintain the temperature by cycling the heater on or off. During particularly cold weather, the low power setting may be insufficient to satisfy the thermostat. Select a higher setting for these periods.

Oscillation Function: This model is equipped with an oscillation feature. If you want to obtain a wider area of heat circulation, press button for oscillation function. 😊

Power Indicator Light: This heater is equipped with a power indicator light, which glows whenever the heater is plugged in and turned on. It will continue to glow even if the thermostat has cycled the heating elements off. This feature is to prevent you from being unaware that the heater is operating and maintaining the temperature of the room.

CLEANING AND MAINTENANCE

Before any cleaning:

1. Make sure the heater is turned OFF and cool to the touch.
2. Disconnect power supply at source by removing plug from power outlet.
3. Your heater is now ready for cleaning.

Regular cleaning:

1. Do not spray cleaning liquid or other chemicals on the unit.
2. The most common cause of overheating is deposits of dust or fluff entering the heater. Interior dust can often be removed by using a vacuum cleaner with a crevice tool attachment.
3. To clean the exterior, use a clean, soft and lightly damp cloth to gently wipe off the dirt from the surface of the unit. Be sure not to wet the heating element and the switches. Allow the unit to dry completely before using it. **CAUTION: DO NOT ALLOW WATER TO RUN INTO THE INTERIOR OF THE HEATER AS THIS COULD CREATE A FIRE OR ELECTRIC SHOCK HAZARD, DAMAGING THE UNIT.**

Classic **ONE YEAR WARRANTY VALID ONLY WITH ORIGINAL PURCHASE RECEIPT**

WARRANTY: Home Hardware Stores Limited warrants this product against defects in any parts or workmanship for a period of 1 year from the original purchase date. This product is for residential use only. It is not intended to be used in commercial or industrial settings. This product warranty covers only the original consumer purchaser of the product.
WARRANTY COVERAGE: This warranty is void if the product has been damaged by accident, neglect, improper handling or operation, shipping damage, abuse, misuse, unauthorized repairs made or attempted, alterations, improper assembly/ installation or maintenance, commercial use or other causes not arising out of defect in materials or workmanship. This warranty does not extend to any units which have been altered or modified or to damage to products or parts thereof of which have had the serial number

TROUBLESHOOTING

PROBLEM	PROBABLE CAUSE	SOLUTION
Heater will not power on.	Heater is not plugged into a 120 V polarized outlet/receptacle. Thermal fuse has permanently disabled the unit's fuse due to extreme heat. Breaker/fuse has been tripped.	Ensure unit is in OFF position. Plug in unit and attempt to turn on again. Do not attempt to fix heater yourself. Please check your electrical box to confirm the breaker has not been blown. This may occur if the unit is sharing a receptacle with another high power consuming appliance. Ensure unit is in OFF position. Plug in unit and attempt to turn on again. Attempt to plug unit into another independent receptacle in the house.
The power indicator light is illuminated, but no heat disperses from the unit.		To resume heating, adjust thermostat temperature to a higher setting. Refer to Thermostat Function for more information.
The heater is creating a burning smell.	A drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not occur again.	Ensure room in which heater is situated is well ventilated. Remove any material preventing air intake into the heater.
The heater is overheating.	Something may be blocking the air intake.	Keep flammable materials like furniture, pillows, bedding, papers, clothes and curtains at least 1m / 3 feet from the front, top, sides and rear of the heater. Keep the rear grill away from walls and drapes so as not to block the air intake. If overheating occurs the Overheat Protection system will shut off the heater. Unplug it, inspect and remove any objects on or adjacent to the heater that may cause high temperatures. Wait five to ten minutes for the unit to cool down. Then plug it back in, and resume the normal operation.

PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF. DOING SO WILL VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY.

removed, altered, defaced or rendered illegible. Return to the closest Home Hardware store for inspection and/or replacement.
IMPLIED WARRANTIES: Any implied warranties which the purchaser may have are limited in duration to 1 year from the date of purchase. This limited warranty is in lieu of all other warranties expressed or implied, including warranties of merchantability and fitness for a particular purpose and excludes all liability for incidental or consequential damages for any cause whatsoever.
WARRANTY PERFORMANCE: During the above 1 year warranty period, a product with a defect will be replaced when the product is returned to an authorized dealer. The replacement product will be in warranty for the balance of the 1 year warranty period and an additional one month period. No charge will be made for such replacement.