

Classic

Oil Filled Heater

With Adjustable Thermostat

3836W762



750/1500 W 120 V AC, 60 Hz
OWNER'S MANUAL

READ AND SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Portable electric heaters are designed for spot heating or as a supplementary heat source. They are not intended to be the main source of heat during the normal heating season.

IMPORTANT INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS HEATER

NOTE: There may be a trace of smoke or odour when unit is first started. Do not be alarmed. This indicates that a drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not re-occur. Make sure that the room in which the appliance is located is well ventilated during this operation. It is normal for the appliance to emit small cracking sounds when you turn it on for the first time. Do not be alarmed.

When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electrical shock and injury to persons or property, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3' / 0.9 m from the front and top of the heater and keep them away from the sides and rear. Keep the rear grille away from walls or drapes so as not to block the air intake.
3. Extreme caution is necessary when any heater is used by or near pets, children or the disabled and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions or has been dropped or damaged in any manner.


6. Do not use outdoors. This product is intended for normal household use only.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs or runners. Arrange cord away from high traffic areas where it will not be tripped over. Route the cord so that it will not be walked on, or pinched by furniture.
9. To disconnect the heater, turn control to "OFF", then remove the plug from outlet.
10. Connect to properly polarized outlets only.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage to the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. The heater has hot or arcing or sparking pads inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
14. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, injury to persons or damage to property.
15. To prevent overload and blown fuses and breakers, be sure that no other appliance is plugged into the same outlet or into another outlet wired into the same circuit.
16. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets should be replaced prior to further use of the heater. Plugging heater into a worn outlet may result in overheating of the power cord or fire.
17. Ensure the heater is on a stable, secure surface to eliminate the potential of it tipping over.
18. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
19. Be sure that the plug is fully inserted into the appropriate outlet. Periodically check that your outlet is in good condition to avoid overheating or deformation of the plug.
20. Check that neither the appliance or the power cable has been damaged in any way during transportation.
21. Make sure that no pieces of polystyrene or other packaging material have been left on the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
22. When switching on the appliance for the first time, you may notice a slight odour which is normal with new electrical appliances. Allow odour to dissipate by running appliance at full power for about ten minutes. Make sure that the room in which the appliance is located is well ventilated during this operation. This heater draws 12.5 A during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
23. Do not run in locations when the heater will be left unattended for long periods of time.
24. Do not use attachments or filters.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF RECEPTACLE, FULLY INSERT.

ASSEMBLING YOUR OIL HEATER

The heater is packaged with the feet unattached. You must attach them before operating the heater.

WARNING: Do not operate without feet attached. Do operate the heater only in upright position (feet on the bottom, controls on the top), any other position could create a hazardous situation.

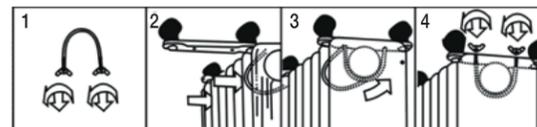

1. Place the radiator body upside down on a scratch free location, make sure it is stable and will not fall.
2. Screw off the wing nuts from the U-shaped bolt provided, attach the U-shaped bolt to the U-facing flange between first and second fins (near the front cover).

3. To attach the castor mounting plate to the radiator body, you should insert the threaded ends of the U bolt in the holes on the castor mounting plate.


4. Screw the wing nuts back to the U bolt and fasten the wing nut properly.

Note: do not over tighten, which may cause the damage of radiator flange.

5. Screw off spherical nut from the castor, align the shaft to the hole of the castor mounting plate, insert in, and screw on the spherical nut.

6. Repeat 2, 3, 4 and 5 on the rear of radiator for mounting of the rear castors.

Note: the rear castors must be mounted between the end two fins.

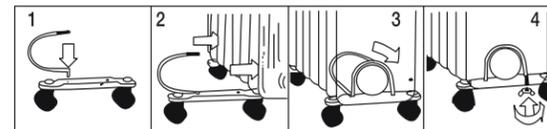

OPERATING YOUR OIL RADIATOR

NOTE: It is normal when the heater is turned on for the first time or after having not been used for a long period, the heater may emit some smell and fumes or have some noise inside, these will disappear when the heater has been on a short while.

1. Before using the heater, make sure that it is on a flat and stable surface. Damage may occur if it is placed on an incline or decline.
2. Set all the controls to OFF position. Insert the plug into a North American standard grounded outlet. Be sure that plug fits firmly.
3. Rotate the thermostat knob clockwise to MAX position and switch the heater on as follow: the switch I for low heat, the switch II for medium heat and the switch III for high heat.
4. When your room reaches the desired temperature, now slowly rotate the thermostat knob counter clockwise until the pilot light goes out. The thermostat can now be left at this setting. As soon as the room temperature has dropped below the set temperature, the unit will switch itself on automatically until the set temperature has been reached again. In this way the room temperature remains constant with the most economical use of electricity.
5. If you want to change the room temperature setting, rotate the thermostat knob clockwise to raise the temperature, or counter clockwise to lower it.
6. This heater includes an overheat protection system that shuts off the heater when parts of the heater are getting excessively hot.
7. To completely shut the heater off, turn all the controls to OFF, and remove plug from the socket outlet.

CLEANING YOUR OIL RADIATOR

1. Always disconnect the heater from the wall receptacle before cleaning.
2. Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth.
3. DO NOT use waxes or polishes as these may react with the heater and cause discolouration.

STORING YOUR OIL RADIATOR

1. Save the box for off season storage.
2. Clean the heater following the cleaning instructions above.
3. Remove the wheel base assemblies.
4. Place the heater, and wheel assemblies in the original box, and store in a cool, and dry place.
5. If you choose store your heater fully assembled, be sure to cover it to protect it from dust.

TROUBLESHOOTING

PROBLEM	PROBABLE CAUSE	SOLUTION
Unit is not heating.	Room temperature has warmed to the thermostat setting.	Adjust the thermostat control knob to a higher setting. For more information see operating instructions.
	Thermal fuse has been activated due to extreme overheating and has permanently shut off the heater.	Do not attempt to fix unit yourself.
	Thermal cut-off has been activated.	Turn heater off and allow to cool for 15-20 minutes. Once cooled, check to make sure there are no objects on or adjacent to the unit. Resume operation of the unit.
The heater is creating a burning smell.	A drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not occur again.	Ensure room where heater is situated is well ventilated.
	Check to ensure there are no combustible materials 3' / 0.9 m from the heater.	Remove any combustible items away from heater.

PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF. DOING SO WILL VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY.

Classic

ONE YEAR WARRANTY

VALID ONLY WITH ORIGINAL PURCHASE RECEIPT

WARRANTY: Home Hardware Stores Limited warrants this product against defects in any parts or workmanship for a period of 1 year from the original purchase date. This product is for residential use only. It is not intended to be used in commercial or industrial settings. This product warranty covers only the original consumer purchaser of the product.

WARRANTY COVERAGE: This warranty is void if the product has been damaged by accident, neglect, improper handling or operation, shipping damage, abuse, misuse, unauthorized repairs made or attempted, alterations, improper assembly/ installation or maintenance, commercial use or other causes not arising out of defect in materials or workmanship. This warranty does not extend to any units which have been altered or modified or to damage to products or parts there of which have had the serial number removed, altered, defaced or rendered illegible. Return to the closest Home Hardware store for inspection and/or replacement.

IMPLIED WARRANTIES: Any implied warranties which the purchaser may have are limited in duration to 1 year from the date of purchase. This limited warranty is in lieu of all other warranties expressed or implied, including warranties of merchantability and fitness for a particular purpose and excludes all liability for incidental or consequential damages for any cause whatsoever.

WARRANTY PERFORMANCE: During the above 1 year warranty period, a product with a defect will be replaced when the product is returned to an authorized dealer. The replacement product will be in warranty for the balance of the 1 year warranty period and an additional 1 month period. No charge will be made for such replacement.

MADE IN CHINA / FABRIQUÉ EN CHINE
HOME HARDWARE STORES LIMITED
ST. JACOBS, ONTARIO N0B 2N0
ORDER ONLINE / COMMANDE EN LIGNE
homehardware.ca

© 05 / 2017 Home Hardware Stores Limited

DO NOT PRINT THIS BOX!

Job Description: Classic oil filled heater manual SKU:3836-762 UPC: Docket: 14374 Date: May 11, 2017

IMPORTANT! PLEASE READ THIS NOTE.

Do not alter or revise this artwork. If revisions, resize is required contact Libera Graphics for design changes. Before reprinting this artwork after receiving new orders, please contact Libera graphics for possible packaging updates.

SEND COLOUR PROOF OR PDF TO LIBERA GRAPHICS FOR APPROVAL BEFORE PRINT PRODUCTION