

# Instant™

## OMNI™ PLUS

TOASTER OVEN AND AIR FRYER



### User manual

Important safeguards  
Products, parts and  
accessories

Get started

Control panel

Cooking

Rotisserie cooking

Care, cleaning and storage

Troubleshooting

Warranty

Contact



Register your product today at [instantappliances.com/support/register](https://instantappliances.com/support/register).  
Download the Instant Pot App with 1000+ recipes at [instantappliances.com/app](https://instantappliances.com/app).

# IMPORTANT SAFEGUARDS



At Instant Brands™ your safety always comes first. The Instant™ Omni™ Plus family was designed with your safety in mind, and we mean business. Check out this appliance long list of safety mechanisms on [instantappliances.com](https://instantappliances.com) to see what we mean.

When using electrical appliances, basic safety precautions should always be followed:

- 01 READ ALL INSTRUCTIONS, SAFEGUARDS AND WARNINGS BEFORE OPERATING THE APPLIANCE. FAILURE TO FOLLOW THESE SAFEGUARDS AND INSTRUCTIONS MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.
- 02 Always operate the appliance on a stable, non-combustible, level surface.
- 03 **⚠ CAUTION** The appliance's outer surfaces may become hot during use. DO NOT touch metal or glass surfaces. Use handles or dials. Wear hand protection when handling hot components to avoid burns. Extreme caution must be used when moving the appliance. Let the appliance cool to room temperature before handling or moving.
- 04 **⚠ CAUTION** To protect against the risk of electrical shock, DO NOT immerse any part of the appliance in water or other liquid. DO NOT rinse the appliance under a tap. Proper maintenance is recommended after each use. Let the appliance cool to room temperature before cleaning or storage. See **Care, cleaning and storage**.
- 05 **⚠ CAUTION** This appliance is NOT to be used by children or by persons with reduced physical, sensory, or mental capabilities. Close supervision is necessary when this appliance is used near children and these individuals. Children should not use or play with this appliance.
- 06 Unplug the appliance when not in use, before assembling or disassembling parts and before cleaning. To unplug the appliance, grasp the plug and pull from the outlet. Never pull from the power cord. Allow to cool before putting on or taking off parts.

## **⚠ WARNING**

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

# IMPORTANT SAFEGUARDS



- 07 Regularly inspect the appliance and power cord. DO NOT operate an appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. For assistance, contact Customer Care at [support@instantappliances.com](mailto:support@instantappliances.com), [instantappliances.com/#chat](https://www.instantappliances.com/#chat), or 1-800-828-7280.
- 08 DO NOT use accessories or attachments not authorized by Instant Brands Inc. The use of attachments not recommended by the manufacturer may cause a risk of injury, fire, or electric shock.
- 09 Avoid contact with moving parts. Failure to do so may result in injury.
- 10 For household countertop use only. DO NOT use outdoors. Not for commercial use.
- 11 **⚠ CAUTION** Spilled food can cause serious burns. A short power supply cord is provided to reduce the hazards resulting from grabbing, entanglement and tripping.
  - Keep the appliance and cord away from children.
  - DO NOT let the power cord hang over the edge of tables or counters, or allow it to touch hot surfaces.
  - Never use below-counter power outlets, and never use with an extension cord.
- 12 DO NOT use the appliance in electrical systems other than 120 V~ 60 Hz. DO NOT use with power converters or adapters or floor-level power outlet.
- 13 DO NOT place the appliance or power cord on or near a hot gas or electric burner, or a heated oven. Heat from an external source will damage the appliance.
- 14 DO NOT use the appliance for other than its intended use.
- 15 **⚠ CAUTION** Extreme caution should be exercised when using containers constructed of materials other than metal or glass in the appliance. Failure to do so may result in fire or burns.
- 16 **⚠ CAUTION** DO NOT place any combustible materials in the cooking chamber, such as paper, cardboard, plastic, Styrofoam or wood, or any other materials that are not oven safe and may catch fire or melt, and may result in burns.

## **⚠ WARNING**

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

# IMPORTANT SAFEGUARDS



- 17 DO NOT cover or block the air vents while the appliance is in operation. Doing so will prevent even cooking and may damage the appliance or cause it to overheat, which may result in fire or burns.
- 18 **⚠️ WARNING** Never pour oil into the cooking pan. If needed, spray food lightly with non-stick cooking spray. Using oil could cause fire and result in personal injury.
- 19 **⚠️ CAUTION** While cooking, the internal temperature of the appliance reaches several hundred degrees. To avoid personal injury, never place unprotected hands inside the appliance until it has cooled to room temperature. Exercise caution and avoid the hot steam and air when opening the oven door.
- 20 To avoid scalding injury, use extreme caution when removing the cooking pan or disposing of hot grease. Use hand protection when handling hot items.
- 21 DO NOT store any materials other than authorized Instant Brands accessories in the appliance.
- 22 When cooking, DO NOT place the appliance against a wall or against other appliances. Leave at least 5" / 13 cm of free space on the back, sides, and above the appliance. DO NOT operate the appliance on or near combustible materials such as tablecloths and curtains. DO NOT place anything on top of the appliance when in operation. A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls and the like.
- 23 **⚠️ CAUTION** When in operation, hot air is released through the air vents. Keep your hands and face at a safe distance from the air vents and take extreme caution when removing the accessories from the appliance. Failure to do so may lead to burns and/or injury.
- 24 **⚠️ CAUTION** To avoid risk of fire or electrical shock, oversize foods, metal foil packages and metal utensils must not be inserted into the appliance. DO NOT overfill the cooking pans. Overfilling may cause food to contact the heating element, which may result in fire and/or personal injury.

## **⚠️ WARNING**

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

# IMPORTANT SAFEGUARDS



- 25 **⚠ CAUTION** DO NOT clean the appliance with metal scouring pads or steel wool. Pieces can break off and touch electrical parts, causing a risk of electric shock, burns and/or injury.
- 26 DO NOT attempt to dislodge food while the appliance is plugged into an electrical outlet as this may lead to electric shock, burns and/or injury.
- 27 **⚠ WARNING** To avoid risk of fire, NEVER leave the appliance unattended during use. Never connect this appliance to an external timer switch or separate remote-control system as this may lead to burns and/or injury.
- 28 Should the appliance emit black smoke, touch **Cancel** and unplug immediately. Wait for smoking to stop and unit to cool before removing accessories.
- 29 DO NOT rest cooking utensils or baking dishes on the appliance's hot surfaces.
- 30 DO NOT use the accessories included with the oven in a microwave, convection oven or conventional oven. DO NOT use these accessories on a ceramic cooktop, electrical coil, gas burner range, or outdoor grill.
- 31 DO NOT cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- 32 Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- 33 To disconnect, press **Cancel** to put the unit in Standby (OFF) mode, then remove plug from wall outlet.
- 34 Extreme caution should be exercised when using containers constructed of other than metal or glass.

## SAVE THESE INSTRUCTIONS.

### **⚠ WARNING**

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

# IMPORTANT SAFEGUARDS



## ⚠ WARNING

Electrical shock hazard. Use grounded outlet only.

- DO NOT remove ground.
- DO NOT use an adapter.
- DO NOT use an extension cord.

Failure to follow these instructions may result in electric shock and/or serious injury.

## ⚠ WARNING






THE FAILURE TO FOLLOW ANY OF THE IMPORTANT SAFEGUARDS AND/OR THE INSTRUCTIONS FOR SAFE USE IS A MISUSE OF YOUR APPLIANCE THAT CAN VOID YOUR WARRANTY AND CREATE THE RISK OF SERIOUS INJURY.


### Special cord set instructions

Per safety requirement, a short power supply cord is provided to reduce the hazards resulting from grabbing, entanglement and tripping.

This appliance has a 3-prong grounding plug. To reduce the risk of electric shock, plug the power cord into a grounded (earthed) electrical outlet that is easily accessible.

### Product specifications

				
Model: OMNI PLUS 18	1800 W	120 V~ 60 Hz	19 Quarts / 18 Litres	25.43 lbs / 11.56 kg

	OMNI PLUS 18
	in: 16.54D × 15.75W × 13.90H cm: 42D × 40W × 35.3H

### Find your model name and serial number

Find both of these on the label on the side of the toaster oven.

## ⚠ WARNING

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.


# Table of Contents

<b>IMPORTANT SAFEGUARDS</b> .....	<b>2</b>
Special cord set instructions.....	6
Product specifications .....	6
Find your model name and serial number .....	6
<b>Product, parts and accessories</b> .....	<b>8</b>
<b>Get started</b> .....	<b>9</b>
Initial set up .....	9
Initial test run .....	10
<b>Control panel</b> .....	<b>11</b>
Settings.....	12
Status messages.....	13
<b>Cooking</b> .....	<b>15</b>
Air Fry, Roast and Bake.....	16
Cooking tips .....	17
Toast .....	18
Broil, Warm, Reheat and Dehydrate.....	19
<b>Rotisserie cooking</b> .....	<b>20</b>
<b>Care, cleaning and storage</b> .....	<b>22</b>
<b>Troubleshooting</b> .....	<b>23</b>
<b>Warranty</b> .....	<b>25</b>
<b>Contact</b> .....	<b>27</b>


# Product, parts and accessories

Before using your amazing new toaster oven, make sure that everything is present and accounted for.


## Toaster Oven

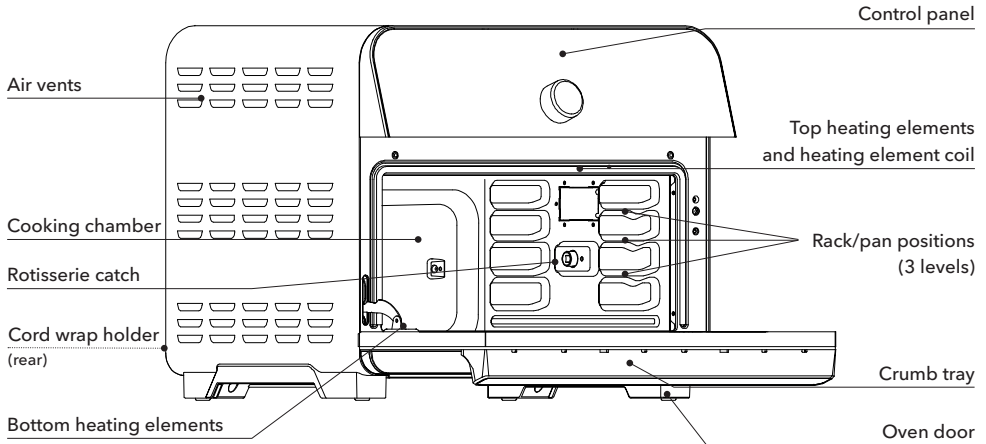


## Accessories

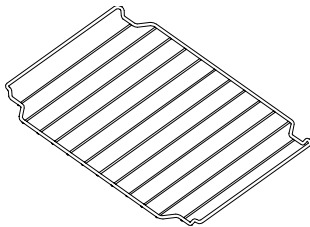


Oven rack

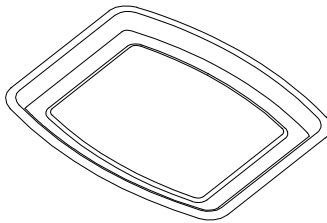


Cooking pan

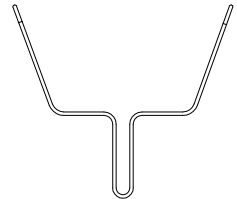

Rotisserie lift

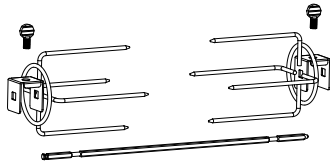

 Rotisserie spit, forks and setting screws



Air fryer basket

*Illustrations in this document are for reference only and may differ from the actual product.  
Always refer to the actual product.*





# Get started

## Initial set up



***"We all eat, and it would be a sad waste of opportunity to eat badly."***  
– Anna Thomas

- 01** Pull that Omni Plus out of the box!
- 02** Remove all the packaging material from in and around the toaster oven.
-  Don't remove any safety warning stickers or the rating label from the oven.
- 03** You may be tempted to put the Omni Plus on your stovetop for quick use – but don't do it! Place it on a stable, level surface, away from combustible material and external heat sources. Wipe the heating element with a soft, dry cloth to make sure there are no stray packaging particles left in the multicooker base.
-  Make sure to leave *at least* 13 cm / 5" of space above and around all sides of the appliance.
- 04** Remove the crumb tray and check the cooking chamber for loose debris.
- 05** Follow the **Care, cleaning and storage** instructions to wash your new toaster oven before using it.

## Is something missing or damaged?

Get in touch with a Customer Care Advisor through our chat widget at [instantappliances.com/#chat](https://instantappliances.com/#chat), by email at [support@instantappliances.com](mailto:support@instantappliances.com) or by phone at **1-800-828-7280** and we'll happily make some magic happen for you!

### CAUTION

Read the **Important safeguards** before using the appliance. Failure to read and follow those instructions for safe use may result in damage to the appliance, property damage or personal injury.

Do not place the appliance on a stovetop, upon on another appliance, or in a heated oven. Heat from an external source will damage the appliance.

To avoid the risk of fire, property damage, and/or personal injury, do not place anything on top of the appliance, and do not block the air vents.

# Get started

## Initial test run

Do you *have* to do the test run? No – but getting to know the ins and outs of your Omni Plus prepares you for success in the kitchen! Take a few minutes to get to know how this little beauty works.

### Stage 1: Setting up for cooking

#### 01 Open the oven door.

Slide the cooking pan onto the bottom rack position, and into the cooking chamber.


Close the door.

#### 02 Plug the power cord into a 120 V power source.

The oven is in standby mode and the display shows **OFF**.

#### 03 Push the dial to wake the oven. Touch the **temperature field**. **Air Fry** and the temperature field will flash.

The temperature field shows **400°F**.

 Don't change the temperature during the test run.

#### 04 Touch the **time field** to select the cooking time.

#### 05 Turn the dial to adjust the time to 20 minutes (**00:20**).

#### 06 Touch **Start** to begin.

The display shows **On** while the oven preheats.

### Stage 2: "Cooking" (...but not really, this is just a test!)

#### 01 When the oven reaches the perfect temperature, it beeps and begins the cooking countdown.

 Don't cook food during the test run.


#### 02 Partway through cooking, the display shows **turn Food**.

Wait 10 seconds for the program to resume automatically, or, open and close the oven door to pause and resume the program manually.

 When the oven door is open, the display shows **OPEN**.

#### 03 The oven counts down the last minute of the cooking time in seconds and beeps when finished. The oven will enter the **Keep Warm** state and once the program finishes, the display shows **End**.


#### 04 Open and close the oven door to return to standby mode and start cooking for real!

 If you forget this last step, the toaster oven will beep to remind you about it.

## CAUTION

Metal, glass surfaces and accessories will be hot during and after cooking. To avoid burn injury, do not touch the appliance, or attempt to insert or remove accessories without proper hand protection.

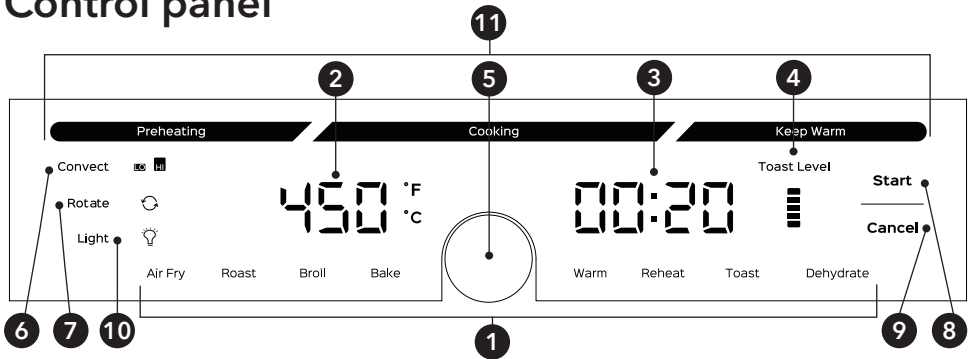


# Control panel



1	<b>Smart programs</b>	<ul style="list-style-type: none"> <li>• Air Fry</li> <li>• Bake</li> <li>• Roast</li> <li>• Broil</li> </ul>	<ul style="list-style-type: none"> <li>• Warm</li> <li>• Reheat</li> <li>• Toast</li> <li>• Dehydrate</li> </ul>
2	<b>Temperature field</b>	Shows the cooking temperature in different Smart Programs and modes. Touch the temperature field to select it.	
3	<b>Time field</b>	Shows the cooking time, reminders, and error messages. Touch the time field to select it.	
4	<b>Toast level</b>	Toasting darkness levels; see <b>Cooking: Toast</b> .	
5	<b>Control dial</b>	Turn the dial to toggle through options. Push the dial like a button to confirm selections, and to wake the oven.	
6	<b>Convection</b>	Touch to toggle between <b>Hi</b> (High) and <b>Lo</b> (Low) convection fan speeds. Only applicable during Roast, Broil, Bake, Reheat and Dehydrate.	
7	<b>Rotate</b>	Touch to turn rotisserie mode on and off. Only applicable during Air Fry, Bake and Roast.	
8	<b>Start</b>	Touch to begin a selected smart program.	
9	<b>Cancel</b>	Touch to stop a smart program at any time and go back to standby mode.	
10	<b>Light</b>	Touch to turn the oven light on and off any time.	
11	<b>Status bar</b>	Shows the cooking status in different Smart Programs and modes.	

*Illustrations in this document are for reference only and may differ from the actual product.  
Always refer to the actual product.*

# Settings

To do this...	Do this!
<b>Wake the toaster oven.</b>	<p>The display shows <b>OFF</b> to let you know that the Omni is in standby mode, ready for action.</p> <p>Press the dial to access the Smart Programs.</p>
<b>Turn the oven light on and off.</b>	<p>Touch <b>Light</b> to turn the oven light on and off.</p> <p> The oven light turns off automatically after 1 minute.</p>
<b>Turn sounds on and off.</b>	<p>In standby mode, press and hold the dial for 3 seconds. The display changes to <b>S On</b> when the sound is on, and <b>SOFF</b> when the sound is off.</p> <p> Error alerts cannot be silenced.</p>
<b>Change temperature scale (°C or °F).</b>	<p>Select any Smart Program, then touch and hold the <b>temperature field</b> for 3 seconds. The temperature scale changes to display in Celsius (°C) or Fahrenheit (°F).</p>
<b>Save a custom cooking time or temperature.</b>	<p>Select a smart program, adjust the time and temperature as you like, then touch <b>Start</b> to save the changes to the toaster oven's memory.</p>
<b>Make on-the-fly changes to the cooking time or temperature.</b>	<p>Once a Smart Program has started, touch the <b>time field</b> or the <b>temperature field</b>, then turn the dial to adjust the cooking time or temperature as needed.</p> <p>Touch <b>Start</b> to resume cooking with your changes.</p> <p> Changes made during cooking will not be saved.</p>
<b>Reset an individual smart program.</b>	<p>In function selection mode, touch and hold the smart program key you want to reset (for example: Air Fry) for 3 seconds. The cooking time and temperature for <b>that Smart Program</b> are restored to the factory default settings.</p>

# Settings

To do this...	Do this!
Reset all smart programs.	In function selection mode, touch and hold <b>Cancel</b> for 3 seconds. The cooking times and temperatures for <b>all Smart Programs</b> are restored to the factory default settings.

## Status messages

OFF

The Omni Plus is in standby mode and ready to go!

On

A smart program is in the preheat stage.

 Only applies to Air Fry, Roast and Bake.

OPEN

The oven door is open. If the oven door remains open for over 5 minutes during cooking and/or 30 seconds during program selection, the oven returns to standby mode.

00:15

The display shows the cooking time and on-screen messages.

375 °F

Shows the oven's target cooking temperature.


Toast Level



Shows the active toasting darkness level from 1 to 5.

Turn  
Food

 
Food is ready to be flipped or rotated, as recommended by your recipe.


 Only applies to Air Fry, Roast and Bake, and won't appear if the rotisserie is on.

End

The Smart Program has finished!


## Status bar



1	<b>Preheating</b>	The Omni Plus is heating up to the perfect temperature to cook your meal.  Only applies to Air Fry, Roast and Bake.
2	<b>Cooking</b>	Cooking is in progress.
3	<b>Keep Warm</b>	Cooking has finished and the oven enters into the Keep Warm state.

# Cooking

The Omni Plus is a powerhouse countertop oven that you can trust to cook evenly and deeply.

What we love about it	What you should know about it
<p>By combining rapid air circulation with innovative golden quartz heating elements, the Omni Plus heats up quickly, and cooks way faster than regular ovens.</p>	<p>The Omni Plus has a bit of a learning curve. Golden quartz elements use infrared light to cook, which produce more heat, much faster than a regular element.</p> <hr/> <p> Instant Tip: Try reducing your recipes' cooking time and/or temperature by up to 25% to get the results you like best. The Omni Plus will remember the changes you make!</p>

Check out the **cooking timetables** for guidance, or visit our **recipe site** for fun, easy-to-follow instructions. You can also download the free **Instant Pot app** to search recipes, save favorites and more.


## Cooking accessories

The **oven rack** is perfect for toasting bread and bagels, and baking pizza and big ol' baked potatoes. You can place any oven-safe cookware on the oven rack, the same as you would in a regular oven.

 


 Do not cover the oven rack when cooking.

Place the oven rack or cooking pan on the top, middle, or bottom positions as your recipe recommends, or however you see fit!

The **cooking pan** should be used for messy foods, like chicken tenders, herb roasted veggies and cheesy garlic bread.

 Instant Tip: Line the pan with parchment paper instead of aluminum foil. Optionally, spray the pan or basket with non-stick cooking spray before adding food to help prevent sticking.

The **air fryer basket** is perforated for airflow and can be used for most air fried or roasted foods, like chicken wings and coconut shrimp, or buffalo cauliflower bites and garlicky Brussels sprouts. Always place the air fryer basket on the cooking pan when inserting it into the oven.

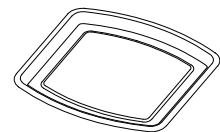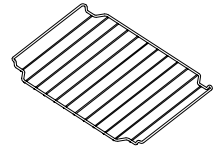

## CAUTION

To avoid risk of fire, property damage and/or personal injury, do not spray oil into the cooking chamber, and never use aluminum foil.

# Cooking

## Air Fry, Roast and Bake



These programs use convection cooking to give your meals rich, crispy flavor with little to no oil, so you can say, "See ya!" to the greasy mess and extra calories! The cooking times and temperatures below are recommendations only. Play with the presets to get the results you like best!

Smart program	Default time	Time range	Default temperature	Temperature range
Air Fry	18 minutes (00:18)	1 to 45 minutes (00:01 to 00:45)	204 °C 400 °F	82 to 232 °C 180 to 450 °F
	For all your favorite deep-fried meals, like fries, cauliflower bites, wings, nuggets and more.			
Roast	40 minutes (00:40)	1 minute to 4 hours (00:01 to 04:00)	185 °C 365 °F	82 to 232 °C 180 to 450 °F
	Ideal for vegetable dishes, beef, lamb, pork, poultry and more.			
Bake	40 minutes (00:40)	1 minute to 4 hours (00:01 to 04:00)	176 °C 350 °F	82 to 232 °C 180 to 450 °F
	Light and fluffy cakes and pastries, scalloped potatoes and more.			

### Stage 1: Setting up for cooking

- 01** Plug the power cord into a 120 V power source.  
The oven is in standby mode and the display shows **OFF**.
- 02** Push the dial to wake the oven.
- 03** Select the Smart Program you want to use: **Air Fry**, **Bake** or **Roast**.
- 04** Touch the **temperature field** to select it then turn the dial to adjust the cooking temperature.
- 05** Touch the **time field** to select it then turn the dial to adjust the cooking time
- 06** Touch **Start** to begin.  
The display shows **On** while the oven preheats.


### Stage 2: "Cooking"

- 01** When the oven reaches the perfect temperature, it beeps and begins the cooking countdown.  
Open the oven door and carefully place your food items inside.  
 You can put food in the oven before or after preheating, as your recipe recommends.
- 02** Partway through cooking, the display shows **turn Food**.  
Open the oven door if you want to turn or toss your food items.  
Close the oven door to resume the cooking program.  
 If your food doesn't need to be flipped, wait 10 seconds for the program to resume automatically, or, open and close the oven door to pause and resume the program manually.



# Cooking

**03** When the oven enters into the **Keep Warm** state or the display shows **End**, carefully open the door, and, using proper hand protection, remove your food from the cooking chamber.

 Once cooking finishes, the Omni Plus will remind you to touch **Cancel** or remove your meal every 5 minutes for up to 1 hour.

## Cooking tips

Give all your favorite fresh and frozen snacks a fighting chance!

- Air Fry, Bake and Roast preheat as an important step, and most foods benefit from a preheated oven. Wait for the countdown to appear before adding food to the cooking chamber.
- When baking cake, pie, quiche, and other treats, any oven-safe baking dish will do!  
If you're worried about overcooking, cover it with any oven-safe lid.
- For coated food, like onion rings or deep-fried pickles, use an egg wash with bread-crumbs rather than liquid-based batters to make sure that batter sticks to the food.
- Spray food items with cooking oil before adding seasoning to get the seasoning to stick well.
- For super crispy fries, soak your fresh-cut potato sticks in ice water for 15 minutes, then pat them dry and toss them lightly with oil before cooking.
- Patting dry moist food items before cooking prevents excess steam and splatter, and gives you crispier results.
- Air frying can cause oil and fat to drip from foods. To prevent excess smoke, watch the oil levels and carefully remove and drain the cooking pan and/or crumb tray as needed.

Check out the **cooking timetables**, download the **Instant Pot app**, or, visit our **recipe site** for fun, easy-to-follow recipes.


### CAUTION

The toaster oven and accessories will be hot during and after cooking. To avoid risk of burn injury, do not touch hot surfaces with unprotected hands. Always use proper hand protection and exercise extreme caution when adding or removing food from the hot cooking chamber.

# Cooking

## Toast

Toast up to 6 slices of bread or bagel halves at a time – no flipping required!

Smart program	Default number of pieces	Time range	Default toast darkness level	Toast darkness range
Toast	2 pieces (2PC)	Adjusts by quantity of slices and toast darkness level	Toast Level 3	Toasting Levels 1 to 5
	 The toasting level is also affected by how close you place the cooking tray to the element. For best results, place the rack at the Toast indicator level shown on the door.			

**01** Plug the power cord into a 120 V power source.

The oven is in standby mode and the display shows **OFF**.

**02** Open the oven door and place your food items inside.

Close the door.

**03** Push the dial to wake the oven.

Touch **Toast**.

**04** Touch the field indicating the number of pieces. When the field flashes, use the dial to select the number of slices you're toasting, from 1 piece (**1PC**) to 6 pieces (**6PC**).

The toasting time adjusts automatically.

**05** Touch the **Toast Level bar** to select it.

When it flashes, use the dial to select a darkness level, from 1 to 5.


**06** Touch **Start**.

The display starts to count down right away.

**07** To add time, touch the **time field**, then turn the dial to add to the cooking time.

Touch **Start** to resume cooking.

**08** When the display shows **End**, carefully open the door, and, using proper hand protection, remove your food from the cooking chamber.

 If you forget this last step, the toaster oven will beep to remind you every 5 minutes for up to 1 hour.

### CAUTION


The toaster oven and accessories will be hot during and after cooking. To avoid risk of burn injury, do not touch hot surfaces with unprotected hands. Always use proper hand protection and exercise extreme caution when adding or removing food from the hot cooking chamber.

# Cooking

## Broil, Warm, Reheat and Dehydrate

These cooking times and temperatures are recommendations only. Play with the presets to get the results you like best!

Smart program	Default time	Time range	Default temperature	Temperature range
Broil	10 minutes (00:10)	1 to 20 minutes (00:01 to 00:20)	232 °C 450 °F	176 to 232 °C 350 to 450 °F
	Direct top-down heat designed to melt cheese, crisp meat, and caramelize fruits and vegetables.			
Warm	1 hour (01:00)	1 minute to 2 hours (00:01 to 02:00)	77 °C 170 °F	77 to 149 °C 170 to 300 °F
	Keep food warm without overcooking or drying out.			
Reheat	10 minutes (00:10)	1 minute to 1 hour (00:01 to 01:00)	149 °C 300 °F	48 to 182 °C 120 to 360 °F
	Reheat leftovers with a perfect crunch quickly and easily.			
Dehydrate	8 hours (08:00)	30 minutes to 72 hours (00:30 to 72:00)	57 °C 135 °F	29 to 79 °C 85 to 175 °F
	Perfect for homemade fruit leather, jerky, dried herbs, vegetables and more.			

- 01** Plug the power cord into a 120 V power source.  
The oven is in standby mode and the display shows **OFF**.
  - 02** Open the oven door and place your food items inside.  
Close the door.
  - 03** Push the dial to wake the oven.
  - 04** Select the Smart Program you want to use: **Broil, Warm, Reheat, or Dehydrate**.
  - 05** Touch the **temperature field** to select it, then use the dial to adjust the cooking temperature.
  - 06** Touch the **time field** to select it, then use the dial to adjust the cooking time.
  - 07** Touch **Start** to begin.  
The cooking countdown starts right away.
  - 08** When the display shows **End**, carefully open the door, and, using proper hand protection, remove your food from the cooking chamber.
-  If you forget this last step, the toaster oven will beep to remind you every 5 minutes for up to 1 hour.

### CAUTION

When cooking meat, always use a meat thermometer to ensure the internal temperature reaches a safe minimum temperature. Refer to the USDA's **Safe Minimum Internal Temperature Chart**.

# Rotisserie cooking

The rotisserie spit and forks are perfect for roasting whole chicken, tenderloin and much more. Follow the steps below to prepare your food, then turn on the rotisserie to get crispy, gorgeous, golden-all-over results! You can also view the "how to use the rotisserie" video at [instantappliances.com/omniplus18](https://instantappliances.com/omniplus18).


Always insert the rotisserie spit and food into the cooking chamber before preheating the toaster oven.

## Stage 1: Setting up the rotisserie spit


- 01** Unscrew the 2 setting screws from the forks and set aside.
- 02** Push your food item onto the spit.



- 03** Slide the forks onto both ends of the spit, making sure the prongs are inserted into the food item securely on both sides.

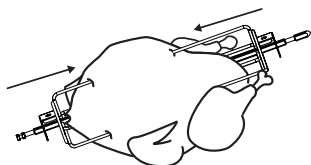


- 04** When you're happy with the positioning, insert and tighten the setting screws to hold the forks in place.

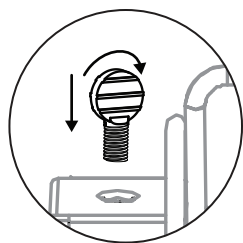


## Stage 2: Positioning the rotisserie spit

- 01** Open the oven door.
- 02** Insert the pointed end of the rotisserie spit into the rotisserie catch on the right side of the cooking chamber.

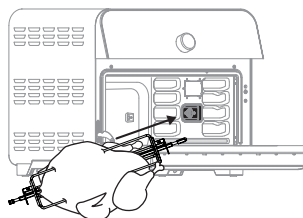


- 03** Lower the square end of the rotisserie spit into the notch on the left. Close the oven door.

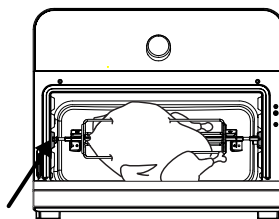

## Stage 3: Setting up the Omni for rotisserie cooking


- 01** Connect the power cord to a 120 V power source.  
The oven is in standby mode and the display shows **OFF**.
- 02** Push the dial to wake the oven and select the Smart Program you want to use: **Air Fry**, **Roast** or **Bake**.

# Rotisserie cooking


- 01** Touch the **temperature field**. When the temperature field flashes, use the dial to adjust the cooking temperature.
  - 02** Touch the **time field** to select it then turn the dial to adjust the cooking time.
  - 03** Touch **Start**.
  - 04** To turn the rotisserie feature on and off, touch **Rotate**.
-  Rotisserie mode will turn on automatically when **Roast** begins.

## Removing rotisserie cooked food


- 01** Open the oven door.  
Position the rotisserie lift hooks beneath the left and right arms of the rotisserie spit where the indents are located.

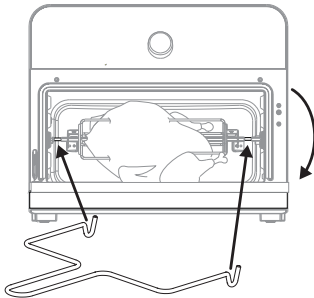


- 02** Lift the left side of the rotisserie spit slightly, then move the spit to the left to remove it from the catch on the right.

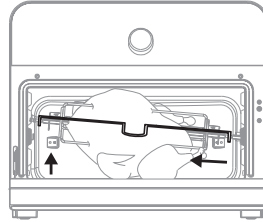

- 03** Carefully pull the rotisserie spit towards you to remove your food from the cooking chamber, then place your food on a tray or heat-resistant surface.

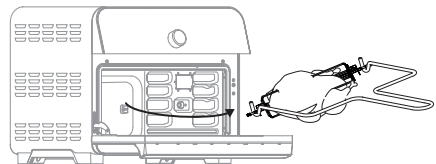

- 04** Using heat protection for your hands, unscrew the setting screws and remove the forks from the food, then remove the food from the spit.

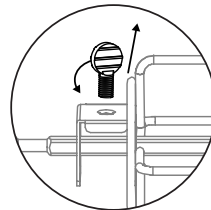

## CAUTION

The rotisserie spit, forks and basket will be hot during and after cooking. To avoid risk of burn injury, always use the rotisserie lift to remove the spit, and exercise extreme caution when removing hot items from the cooking chamber. Always use proper hand protection when handling and/or disassembling hot rotisserie accessories.

# Care, cleaning and storage

Clean your Instant Omni Plus and accessories after each use.

Always unplug the toaster oven and let it cool to room temperature before cleaning. Never use harsh chemical detergents, scouring pads, or powders on any of the parts or components. Let all surfaces dry thoroughly before use, and before storage.

## Dishwasher safe

Part or accessory	Notes
Cooking pan	<ul style="list-style-type: none"><li>Optionally, prior to use, line with parchment paper or spray with non-stick cooking spray for easier cleaning.</li></ul>
Air fryer basket	<ul style="list-style-type: none"><li>For best results, use a bristled brush rather than a sponge or cloth.</li></ul>
Oven rack	<ul style="list-style-type: none"><li>Remove for cleaning.</li></ul>
Rotisserie spit, forks and screws	<ul style="list-style-type: none"><li>Disassemble before cleaning.</li><li>If machine washing, place small parts in washable mesh bag.</li></ul>
Rotisserie lift	<ul style="list-style-type: none"><li>Clean as needed.</li></ul>
Crumb tray	<ul style="list-style-type: none"><li>Remove for cleaning.</li><li>To prevent smoking, make sure grease and food debris is fully removed.</li></ul>

## Damp cloth only and mild dish soap

Part or accessory	Notes
Cooking chamber	<ul style="list-style-type: none"><li>Always check the heating coil and cooking chamber walls for oil spatter and food debris, and clean as needed.</li><li>You may use any commercial oven cleaner to remove stubborn grease residue.</li><li>Use care when cleaning around the top and bottom heating elements.</li></ul>
Exterior	<ul style="list-style-type: none"><li>After cleaning, wipe down with a dry cloth to prevent streaking.</li></ul>
Power cord	<ul style="list-style-type: none"><li>Clean as needed.</li><li>When storing, use the power cord holder at the back of the toaster oven. Do not fold the power cord.</li></ul>

Some discoloration may occur after machine washing, but this will not affect the appliance's safety or performance.

### **WARNING**

To avoid risk of electrical shock and personal injury:

- Do not immerse the appliance in water.
- Do not rinse the appliance under a tap.
- Do not wet prongs of the power cord.


Without proper cleaning, food and grease splatter may build up around the heating elements, causing the risk of smoke, fire, and personal injury.

If you see or smell smoke, touch **Cancel**, unplug the appliance, and allow it to cool. Follow instructions on the previous page to clean the appliance and accessories.


# Troubleshooting

Register your Instant Omni Plus today!

If your issue persists or you have any additional questions, get in touch with a Customer Care Advisor through our chat widget at [instantappliances.com/#chat](https://instantappliances.com/#chat), by email at [support@instantpot.com](mailto:support@instantpot.com) or by phone at 1-800-828-7280.

Problem	Possible reason	Try this
<b>The toaster oven is plugged in but will not turn on.</b>	The appliance is not properly plugged in.	Ensure the power cord is plugged firmly into a 120 V outlet.
	Bad power connection or no power.	Plug in another appliance to the same outlet to check the outlet for power.
		Move the toaster oven to another outlet to ensure there is nothing else plugged in on the same circuit or in the general area.
		Inspect the power cord for damage. If you see damage, discontinue use and contact <b>Customer Care</b> .
<b>Condensation is forming on countertops.</b>	Toaster oven does not have proper ventilation.	Make sure the toaster oven has at least 5" / 13 cm of space around all sides while in use.
<b>Water is dripping from under the door.</b>		
<b>Oven light will not turn on.</b>	Toaster oven is not plugged in.	Ensure that the toaster oven is plugged in securely.
	Oven light has burnt out.	Contact <b>Customer Care</b> .
<b>Black smoke is coming from the toaster oven.</b>	<b>⚠ CAUTION</b> Stop cooking immediately. Touch <b>Cancel</b> , then unplug the appliance and allow it to cool to room temperature.	
	Using an oil with a low smoke point.	Choose a neutral oil with a high smoke point, such as avocado, canola, soybean, safflower, or rice bran oil.
	Food particles on the heating elements, or, food residue in the cooking chamber or on the accessories.	Remove all accessories from the cooking chamber and clean the area as well as all accessories thoroughly.
	Faulty circuit or heating element.	Contact <b>Customer Care</b> .  Do not attempt to repair the appliance.

# Troubleshooting

Problem	Possible reason	Try this
White smoke is coming from the toaster oven.	Cooking foods with a high fat content, such as bacon, sausage, and hamburger.	Avoid air frying foods with a high fat content.  Check the cooking pan for excess oil or fat, and carefully remove as needed after cooking.
	Water is vaporizing, producing thick steam.	Pat dry moist food ingredients before air frying.  Do not add water or other liquid to the cooking chamber when air frying.
	Seasoning on food has blown into the heating element.	Be mindful when seasoning food.  Spray vegetables and meats with oil before seasoning to better help the seasoning stick.
	<b>E1</b>	Sensor error.  Contact <b>Customer Care</b> .  Do not attempt to repair the appliance.
<b>E2</b>		
<b>E3</b>		
<b>E6</b>		
<b>E7</b>		

Any other servicing must be performed by an authorized representative.



# Warranty

## Limited Warranty

This Limited Warranty is effective for one year from the date of original consumer purchase. Proof of original purchase date and, if requested by an authorized representative of Instant Brands Inc. ("Instant Brands"), return of your appliance, is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with written instructions attached to or furnished with the appliance, Instant Brands will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

**This Limited Warranty extends only to the original purchaser and use of the appliance in the United States of America and Canada. This warranty does not cover units that are used outside of the United States of America and Canada.**

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and will void this Limited Warranty. This Limited Warranty does not apply in respect of any appliance or any part thereof that has been altered or modified unless such alterations or modifications were expressly authorized by an Instant Brands representative.

## Limitation and Exclusions

The liability of Instant Brands, if any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance.

### **This Limited Warranty does not cover:**

1. Damage resulting from accident, alteration, misuse, abuse, neglect, unreasonable use, use contrary to the operating instructions, normal wear and tear, commercial use, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, fire, flood, acts of God or repair by anyone unless directed by an Instant Brands Representative;
2. Repairs where your appliance is used for other than normal, personal use or when it is used in a manner that is contrary to published user or operator instructions; or
3. Use of unauthorized parts and accessories, or repairs to parts and systems resulting from unauthorized repairs or modifications made to this appliance.

The cost of repair or replacement under these excluded circumstances shall be paid by you.

# Warranty

## Disclaimer of Implied Warranties

EXCEPT AS EXPRESSLY PROVIDED HEREIN AND TO THE EXTENT PERMITTED BY LAW, INSTANT BRANDS MAKES NO WARRANTIES, CONDITIONS OR REPRESENTATIONS, EXPRESS OR IMPLIED, BY STATUTE, USAGE, CUSTOM OF TRADE OR OTHERWISE WITH RESPECT TO THE APPLIANCES OR PARTS COVERED BY THIS WARRANTY, INCLUDING BUT NOT LIMITED TO, WARRANTIES, CONDITIONS, OR REPRESENTATIONS OF WORKMANSHIP, MERCHANTABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR DURABILITY.

Some states or provinces do not allow for the exclusion of implied warranties of merchantability or fitness, so this limitation may not apply to you. In these states and provinces, you have only the implied warranties that are expressly required to be provided in accordance with applicable law.

## Limitation of Remedies; Exclusion of Incidental and Consequential Damage

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE APPLIANCE REPAIR OR REPLACEMENT AS PROVIDED HEREIN. INSTANT BRANDS SHALL NOT BE LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE APPLIANCE OR DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, PERSONAL INJURY, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE OR KIND.

## Warranty Registration

Please visit [www.instantappliances.com/support/register](http://www.instantappliances.com/support/register) to register your new Instant Brands™ appliance and validate your warranty within thirty (30) days of purchase. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address. The registration will enable us to keep you up to date with product developments, recipes and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understand the instructions for use, and warnings set forth in the accompanying instructions.

## Warranty Service

**To obtain service under this warranty, please contact our Customer Service Department by phone at 1-800-828-7280 or by email to [support@instantappliances.com](mailto:support@instantappliances.com). You can also create a support ticket online at [www.instantappliances.com/support](http://www.instantappliances.com/support). If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection.** Instant Brands is not responsible for shipping costs related to warranty service, save and except for shipping costs associated with the return of your appliance from Canada or within the 48 contiguous states and the District of Columbia of the United States of America, as provided herein. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.



**Instant Brands Inc.**

11–300 Earl Grey Dr., Suite 383  
Ottawa, Ontario  
K2T 1C1  
Canada

**Register your product today**

[instantappliances.com/support/register](https://instantappliances.com/support/register)

**Contact us**

1-800-828-7280  
[support@instantappliances.com](mailto:support@instantappliances.com)  
[instantappliances.com/#chat](https://instantappliances.com/#chat)

[instantappliances.com](https://instantappliances.com)  
[store.instantappliances.com](https://store.instantappliances.com)