

Radley®

12A LAWN EDGER/TRENCHER



Item # 5073-112

Owner's Manual

3 Year Limited Warranty on tool



**READ ALL INSTRUCTIONS BEFORE FIRST USE.
KEEP THIS MANUAL FOR FUTURE REFERENCE.
KEEP AWAY FROM CHILDREN.
SEE NEXT PAGE FOR CRITICAL TOOL RELATED
PRECAUTIONS.**



**WEAR CSA APPROVED
EYE PROTECTION**



**WEAR EAR
PROTECTION**



**WEAR A
FACE MASK**

PRODUCT SPECIFICATIONS

12A LAWN EDGER/TRENCHER

Voltage	120V-60Hz, 12A
No-load speed	4,000 RPM
Adjustable cutting depths	25.4 mm (1"), 31.75 mm (1.25"), 38 mm (1.5")
Blade diameter	20 cm (8")
Tool operating weight	10.51 lb (4.77 kg)

CRITICAL TOOL RELATED PRECAUTIONS

Ensure the blade is undamaged, and securely fastened, and that the blade guard is properly attached. A loose or damaged blade can break during use, posing serious injury risks.

Use a Properly Rated Outdoor Extension Cord. Use a heavy-duty outdoor extension cord rated for at least 12 amps to prevent overheating, electrical failure, or fire hazards.

READ ALL SAFETY, WARNING, PRECAUTIONS AND MAINTENANCE INFORMATION PROVIDED IN THIS MANUAL.

NEED ASSISTANCE?

- Technical questions
- Replacement parts
- Parts missing from package

Scan here for support



Email us at: customerservice@powertoolsplus.ca
Call us on our toll-free customer support line:
1-866-349-8665 (9-5pm Monday-Friday EST)

EXTENSION CORD SAFETY



When using an extension cord with your electric tool refer to the following table to determine the required AWG wire size. Before using your tool make sure the power cord and extension cord are in good working conditions. Make repairs or replacements before using the tool. Only use extension cords that are rated for outdoor use.



WARNING: Consult the extension guide table to ensure the correct extension cord is used with the tool. Use of an extension cord that is insufficiently rated for the tool may result in tool under-performance, overheating, fire, and tool failure.



WARNING: Keep the extension cord clear of the working area. Position the cord so that it will not get caught on the workpiece, tools or any other obstructions while you are working with the power tool.

Make sure any extension cord used with this tool is in good condition. When using an extension cord, be sure to use one of heavy enough gauge to carry the current the tool will draw. An undersized cord will cause a drop in voltage resulting in loss of power and overheating.

The table below shows the correct size to use according to cord length and name plate ampere rating. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord.

Be sure your extension cord is properly wired and in good condition. Always replace a damaged extension cord or have it repaired by a qualified electrician before using it. Protect your extension cord from sharp objects, excessive heat and damp or wet areas.

Use a separate electrical circuit for your power tools. This circuit must not be less than 14 gauge wire and should be protected with either a 15AMP time delayed fuse or circuit breaker. Before connecting the power tool to the power source, make sure the switch is in the OFF position and the power source is the same as indicated on the nameplate. Running at lower voltage will damage the motor.

120V OUTDOOR GRADE EXTENSION CORD LENGTH & GAUGE GUIDE

Outdoor Rated		Total length			
More than	Not more than	25' /7.5 m	50' /15 m	100' /30 m	150' /45 m
0	6A	18	16	16	14
6A	10A	18	16	14	12
10A	12A	16	16	14	12
13A	16A	14	12	Not Applicable	

NOTE: BOLDED VALUES ARE RECOMMENDATIONS FOR THIS TOOL

To reduce the risk of disconnect of tool from the extension cord during operation. Make a knot as shown in Fig. 1

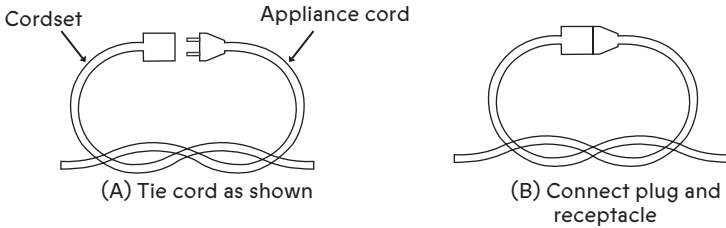


FIG. 1

⚠ WARNING: Use a plug receptacle retaining strap to ensure a proper connection and to ensure there is no strain on the connection. A poor or strained connection can lead to sparking, voltage drop and damage to the tool, overheating, intermittent tool operation, and fire.

Avoid unintentional starting - Turn off the power switch and disconnect the power cord before making any adjustments to the unit and before inspecting, servicing, changing accessories or cleaning.

Handle cord carefully - Never pull electric tool by cord or yank it to disconnect from the power source. Keep cord away from heat, oil, and sharp edges.

Don't force electric tool - it will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.

Don't overreach - Keep proper footing and balance at all times.

Stay Alert - Watch what you are doing. Use common sense. Do not operate tool when you are tired or under the influence of alcohol, drugs, or medications that cause drowsiness.

Disconnect electric tool - Disconnect the electric tool from the power supply when not in use, before servicing, when changing accessories.

Keep guards in place.

Keep hands and feet away from moving parts.

TABLE OF CONTENTS

Product Specifications.....1
Extension Cord Safety 2-3
Table of Contents 4
General Safety Warnings 5-8
Specific Lawn Edger/Trencher Safety Rules 9-10
Safety Symbols11
Know Your Lawn Edger/Trencher 12
Assembly And Operation 13-16
Maintenance 17
Exploded View 18
Parts List 19-21
Warranty 22

GENERAL SAFETY WARNINGS

WARNING: Not for use on wet materials.





Unplug the lawn edger before cleaning or changing accessories.

WARNING: To avoid serious personal injury, do not attempt to use this product until you have read this instruction manual thoroughly and understand it completely. If you do not understand the warnings and instructions in this manual, do not use this product. Call 1-866-349-8665 for assistance. The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and when needed, a full-face shield. We recommend a wide vision safety mask for use over eyeglasses or standard safety glasses with eye shields. Always use eye protection which is marked to comply with ANSI Z87.1 or CSA requirements. Prescription glasses ARE NOT a replacement for proper eye protection.

SAFETY SYMBOLS

The purpose of safety symbols is to alert you of the potential safety RISKS. Recognize and understand them. Follow the instructions provided.

SYMBOL	MEANING
	Failure to obey a DANGER safety alert WILL result in serious personal injury or death to you or to others. Always obey all messages following this symbol to reduce the risk of serious personal injury or death.
	Failure to obey a WARNING safety alert MAY result in serious personal injury or death to you or to others. Always obey all messages following this symbol to reduce the risk of potential serious personal injury or death.
	Failure to obey a CAUTION safety alert MAY result in personal injury or property damage to you or to others. Always obey all messages following this symbol to reduce the risk of personal injury or property damage.
	Failure to obey a NOTICE or a CAUTION (without a safety alert) MAY result in property damage to you or to others. Always obey all messages following this symbol to reduce the risk of property damage.
 	ALWAYS WEAR EYE PROTECTION THAT CONFORMS WITH CSA Z94.3 OR ANSI SAFETY STANDARD Z87.1 FLYING DEBRIS can cause permanent eye damage. Prescription eyeglasses ARE NOT a replacement for proper eye protection. The usage of a safety standard compliant face shield placed over proper safety glasses or goggles can reduce the risk of facial injury. NON-COMPLIANT EYEWEAR CAN CAUSE SERIOUS INJURY IF BROKEN DURING THE OPERATION OF A POWER TOOL.

SYMBOL	MEANING
<p>⚠ WARNING</p> 	<p>USE HEARING PROTECTION, PARTICULARLY DURING EXTENDED PERIODS OF OPERATION OF THE TOOL, OR IF THE OPERATION IS NOISY.</p>
<p>⚠ WARNING</p> 	<p>WEAR A DUST MASK THAT IS DESIGNED TO BE USED WHEN OPERATING A POWER TOOL IN A DUSTY ENVIRONMENT.</p>
<p>⚠ WARNING</p> 	<p>ALWAYS WEAR NON-SLIP GLOVES THAT FIT PROPERLY TO PROTECT YOUR HANDS AND TO HELP YOU GRIP THE TOOL.</p> <p>ALWAYS WEAR STURDY CLOTHING WITH LONG SLEEVES AND LONG PANTS. NEVER OPERATE THE TOOL WHILE WEARING SHORTS, SHORT SLEEVE SHIRT OR WHILE SHIRTLESS.</p> <p>ALWAYS WEAR NON-SLIP SAFETY BOOTS TO PREVENT FOOT INJURIES AND SLIPPING THAT COULD CAUSE LOSS OF CONTROL OF THE TOOL.</p>
<p>⚠ WARNING</p> 	<p>TO AVOID ELECTRICAL HAZARDS, FIRE HAZARDS OR DAMAGE TO THE TOOL, USE PROPER CIRCUIT PROTECTION.</p> <p>This tool is wired at the factory for 120 V AC operations. It must be connected to a 120 V AC, 15 A circuit that is protected by a time-delayed fuse or circuit breaker. To avoid shock or fire, replace power cord immediately if it is worn, cut or damaged in any way.</p>

ELECTRIC GARDENING TOOL SAFETY

GENERAL SAFETY WARNINGS

⚠ WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

- 1) **Avoid Dangerous Environment** - Don't use edger in damp or wet locations.
- 2) **Don't Use In Rain.**
- 3) **Keep Children Away** - All visitors should be kept at a distance from work area.
- 4) **Dress Properly** - Do not wear loose clothing or jewellery. They can be caught in moving parts. Use of rubber gloves and substantial footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.
- 5) **Use Safety Glasses** - Always use face or dust mask if operation is dusty.
- 6) **Use Right Appliance** - Do not use appliance for any job except that for which it is intended.
- 7) **Ground Fault Circuit Interrupter (GFCI) protection should be provided on the circuit (s) or outlet (s) to be used for the gardening appliance.** Receptacles are available having built-in GFCI protection and may be used for this measure of safety.
- 8) **WARNING** - To reduce the risk of electric shock, use only with an extension cord intended for outdoor use, such as an extension cord of cord type SW-A, SOW-A, STW-A, STOW-A, SJW-A, SJOW-A, SJTW-A. or SJTOW-A.
- 9) **Extension Cord** - Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized extension cord will cause a drop in line voltage resulting in loss of power and overheating. The table on page 2 shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord. To reduce the risk of disconnection of appliance cord from the extension cord during operating: Make a knot as shown in Figure 1; use one of the plug-receptacle retaining straps or connectors described in this manual on page 3.
- 10) **Avoid Unintentional Starting** - Don't carry plugged-in appliance with finger on switch. Be sure switch is off when plugging in.
- 11) **Don't Abuse Cord** - Never carry appliance by cord or yank it to disconnect from receptacle. Keep cord free from heat, oil, and sharp edges.
- 12) **Don't grasp the exposed cutting blades or cutting edges when picking up or holding the appliance.**
- 13) **Don't Force Appliance** - It will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.
- 14) **Don't Overreach** - Keep proper footing and balance at all times.
- 15) **Stay Alert** - Watch what you are doing. Use common sense. Do not operate appliance when you are tired.
- 16) **Disconnect Appliance** - Disconnect the appliance from the power supply when not in use, before servicing, when changing accessories such as blades, and the like.

- 17) Store Idle Appliances Indoors** - When not in use, appliances should be stored indoors in dry, and high or locked-up place - out of reach of children.
- 18) Maintain Appliance With Care** - Keep cutting edge sharp and clean for best performance and to reduce the risk of injury. Follow instructions for lubricating and changing accessories. Inspect appliance cord periodically, and if damaged, have it repaired by an authorized service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean, and free from oil and grease.
- 19) Check Damaged Parts** - Before further use of the appliance, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless indicated elsewhere in this manual.
- 20) Keep guards in place and in working order.**
- 21) Keep blades sharp.**
- 22) Keep hands and feet away from cutting area.**
- 23) Stop working when you feel tired or exhausted.** Make regular breaks to rest.
- 24) People with pacemakers should consult their physician (s) before use.**
Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.
- 25) When servicing, use only identical replacement parts.**
- 26) Carefully follow cutting procedures explained in this manual.** They are specifically planned to reduce risk to the operator.
- 27) Only use the accessories and attachments designed for use with this appliance.**
Follow all accessory and attachment instructions. Use of any other accessory or attachments may increase the risk of injury.


SERVICE

Have your power tool or charger serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool or charger is maintained.

SPECIFIC SAFETY RULES FOR LAWN EDGER/TRENCHER

- The blade will continue to rotate for a few seconds after use. Allow it to stop completely and unplug before putting the appliance down, making any adjustments, or servicing the appliance.
- When using the product, follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury. Read all safety warnings and all instructions before operating the product. Be familiar with all the controls and the proper use of the product. Save all warnings and instructions for future reference.
- The product is not intended to be used by children or persons with reduced physical, mental, or sensory capabilities. Children should be adequately supervised to ensure that they do not play with the product.
- Never allow children or people who are unfamiliar with these instructions to use the product. Local regulations may restrict the age of the operator.
- Never use the product while people, especially children, or pets are nearby.
- Keep bystanders, children, and pets 15 m (50 ft) away from the area of operation. Power off the product if anyone enters the area.
- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.
- Wear heavy, long trousers, boots, and gloves. Do not wear loose-fitting clothing, short trousers, or jewellery of any kind. Do not use the product with bare feet. Always wear eye and ear protection.
- Consider the environment in which you are working. Keep the working area free from wires, sticks, stones, and debris, which if struck by the edger/trencher can become thrown objects.
- Before use, always visually inspect the product to see that the blades, blade bolts, and blade assembly are not worn or damaged. Replace worn or damaged blades and bolts in sets to preserve balance.
- Use only manufacturer-recommended replacement parts and accessories.
- Use the product only in daylight or with good artificial light.
- Always be sure of your footing, especially on slopes. Keep firm footing and balance at all times. Walk; never run.
- Exercise extreme caution when reversing or pulling the product towards you.
- Make sure that the blade has stopped before crossing surfaces other than grass and when transporting the product to and from the work area.
- Never use the product with defective guards or shields, or without safety devices in place. Never use an incomplete or modified product. The use of a defective, incomplete, or modified product could result in a hazardous situation.
- Power on the product carefully according to instructions and with feet well away from the blades. Never stand or have any part of your body in line with the path of the edger blade.
- Do not start the product when a bystander is standing in front of the blades.
- Do not put hands or feet near or under rotating parts.
- To reduce the risk of injury associated with contacting moving parts, always power off the product, unplug the tool, and allow both to cool down. Make sure that all moving parts have come to a complete stop:
 1. Before servicing
 2. Before clearing a blockage
 3. Before checking, cleaning, or working on the product.

4. Before changing accessories
 5. Before inspecting the product after striking a foreign object.
 6. Whenever leaving the product unattended
 7. Before performing maintenance
 8. Whenever the product starts to vibrate abnormally (check the product immediately).
- Injuries may be caused, or aggravated, by prolonged use of the product. When using the product for prolonged periods, ensure to take regular breaks.
 - Do not use the product in bad weather conditions, especially when there is a risk of lightning.
 - Do not operate the product on wet grass or in the rain.
 - The use of hearing protection reduces the ability to hear warnings (shouts or alarms). Pay particular attention to potential hazards around and inside the working area. Do not get distracted and always concentrate on the task.


 **CAUTION:** Do not attempt to unclog the blade guard by dropping or tapping the tool on the ground. This can damage the unit. Keep hands clear of edge guide and blade when cleaning as these wear to a very sharp point during edging

SAFETY SYMBOLS

⚠ WARNING: Some of the following symbols may appear on the lawn edger/trencher. Study these symbols and learn their meaning. Proper interpretation of these symbols will allow for more efficient and safer operation of this tool.

V	Volts		Direct current
A	Amperes	n_0	No load speed
Hz	Hertz		Alternating or direct current
W	Watts		Class II construction
kW	Kilowatts		Splashproof construction
μ F	Microfarads		Watertight construction
L	Liters		Protective grounding at grounding terminal, Class I tools
kg	Kilograms	RPM	Revolutions or reciprocations per minute
H	Hours	\emptyset	Diameter
N/cm^2	Newtons per square centimeter	0	Off position
Pa	Pascals		Directional arrow
OPM	Oscillations per minute		Warning symbol
Min	Minutes		Beware of thrown objects.
S	Seconds		Do not expose to rain.
 or a.c.	Alternating current		Wear safety boots to protect against electric shock.
	Three-phase alternating current		Wear gloves to protect your hands.
	Three-phase alternating current with neutral		Always turn the machine off and disconnect the electrical power before conducting inspection, cleaning and maintenance. Remove the plug from the outlet immediately if the cord is damaged or cut.
	Read the user manual before using the machine		
	Wear eye protection. safety helmet. ear protection!		
	Wear ear protection.		
	Keep feet away from the rotating blade.		
	Remove plug from the mains immediately if cable is damaged or cut.		

KNOW YOUR LAWN EDGER/TRENCHER

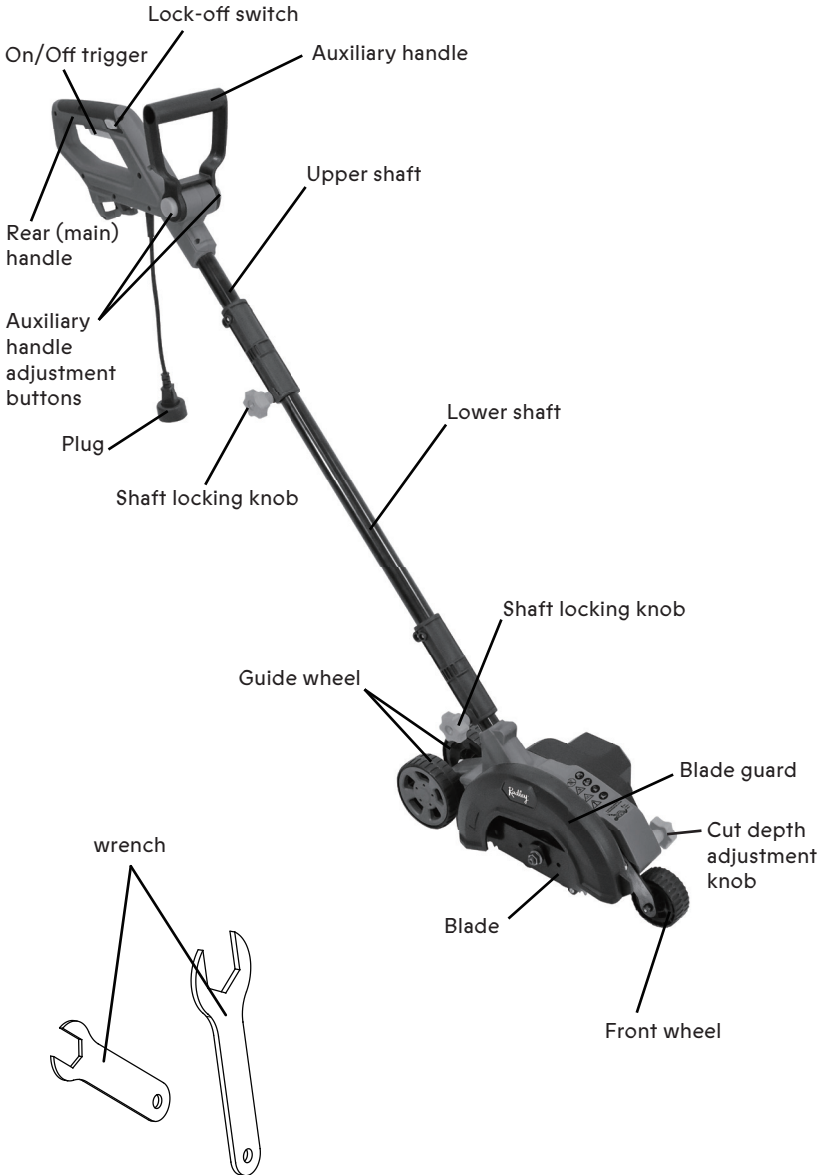

ASSEMBLY AND OPERATION

ASSEMBLING THE UPPER AND LOWER SHAFTS

⚠ WARNING: Always wear eye and ear protection, appropriate respiratory mask, non-slip heavy-duty gloves, and substantial footwear while operating the product. Do not operate the product when barefoot or wearing open sandals.

1. Align the Shafts.

- Position the upper shaft (1) above the lower shaft (2).
- Make sure the fixing groove (3) on the lower shaft is facing downward as shown in (Fig. 1).

2. Connect the Shafts




- Slide the upper shaft straight into the lower shaft until it stops.
- Insert the fixing screw through the aligned holes.
- Hand-tighten the shaft locking knob (1) to secure the upper and lower shafts together (Fig.1).

3. Attach to the Machine Head

- Take the assembled upper and lower shafts (now one piece) and align them with the machine head (2) as shown in (Fig. 2).
- Insert the shaft assembly into the machine head in the direction indicated.

4. Secure the Assembly

- Insert the fixing screw into the machine head connection point.
- Hand-tighten the shaft locking knobs (1) to firmly lock the shafts to the machine head (see Fig. 3).

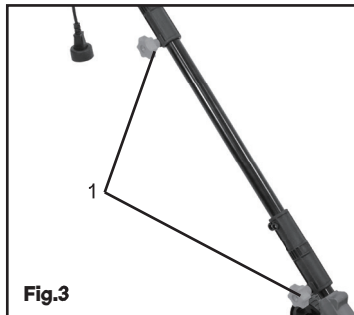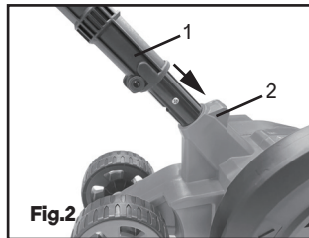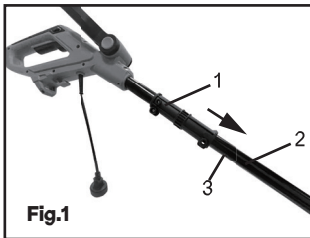

ADJUSTING THE AUXILIARY HANDLE

Press and hold both auxiliary handle adjustment buttons (1) at the same time to adjust the handle. The handle can rotate up to 180° (see Fig. 4).

Note: Do not attempt to forcefully adjust the handle by pressing the single-sided adjustment button, as this may cause damage to the handle.

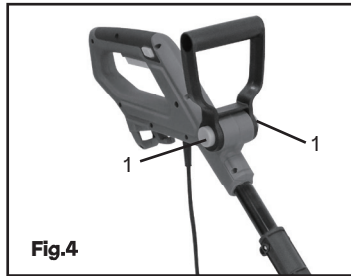


Fig.4

ADJUSTING THE CUTTING DEPTH

⚠ WARNING: Unplug from source of power **BEFORE** making any adjustments to this tool.

1. Unplug the Power Cord: Ensure the tool is turned off and disconnected from the power supply before making any adjustments.

2. Adjust the Cutting Depth: Loosen the cut depth adjustment knob (1) (Fig.5). Move the front wheel (2) (Fig.5) to the desired position by aligning it with one of the three available holes. The position of the hole determines the cutting depth, the lower the hole, the higher the cutting height. The three hole positions correspond to heights of 25.4 mm (1"), 31.75 mm (1.25"), 38 mm (1.5") from high to low.

NOTE: Start the blade depth from 1" initially. Make a shallow incision to test the cutting depth. If you need to adjust the cutting depth, please proceed step by step until you reach the preferred depth.

NOTE: The cut depth adjustment knob locks into one of three preset positions; however, the actual cutting depth may vary slightly depending on the angle at which the unit is positioned during operation.

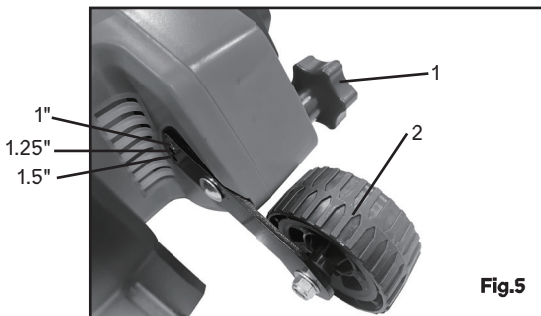


Fig.5

LOCK-OFF AND TRIGGER SWITCHES

The edger/trencher is equipped with both a lock-off and trigger switch. To turn the edger ON:

1. Press the lock-off switch (1) (Fig.6).
2. While continuing to press the lock-off switch, squeeze the on/off trigger switch (2).
3. When the edger starts, release the lock-off switch while continuing to squeeze the trigger switch. The edger will continue to run.
4. To turn the edger OFF, release the trigger switch.

NOTE: To restart the edger, press the lock-off switch and squeeze the trigger switch.

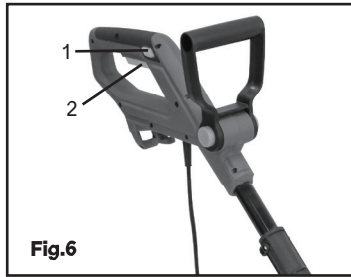


Fig.6

REPLACING THE BLADE

⚠ WARNING: Ensure tool is unplugged **BEFORE** replacing the blade or making any adjustments to tool.

The blade on an edger/trencher should be replaced when it becomes dull, worn, damaged, or rusted, or when cutting performance declines. Frequent use on hard surfaces or tough soil can reduce its effectiveness or compromise safety.

1. Disconnect the power supply of the edger/trencher.
2. Place the edger on a level surface. Position the product with the motor side down and the blade guard side up.
3. Use one wrench (1) to hold the outer flange (2) steady, and use second wrench (3) to loosen the flange nut (4) (see Fig. 7).
4. Remove the flange nut, outer flange, and the blade from the motor shaft.
5. Install the new blade by aligning it on the inner flange, ensuring it sits flat and secure. Then, reinstall the outer flange and tighten the flange nut.

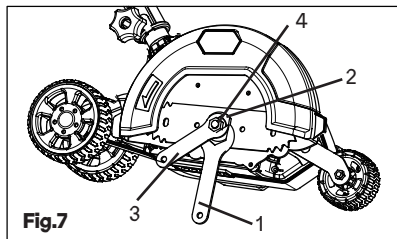


Fig.7

OPERATING

⚠ WARNING: Always use two hands to operate the product. Hold the product with one hand on the rear handle and the other hand on the auxiliary handle.

⚠ WARNING: Beware of objects thrown by the tool. Remove debris like small stones, gravel, and other foreign objects from the work area before starting operation. Wires or string may become entangled with the blade.


⚠ WARNING: When connecting the power supply, please keep your hands away from the lock-off trigger and on/off trigger to avoid accidentally starting the product.

1. Connect the edger/trencher to the power supply.
2. Press and hold the lock-off trigger, and squeeze the on/off trigger to power on the tool.

⚠ WARNING: Keep hands and feet away from the blade at all times and especially when powering on the motor.


3. Use the edger along sidewalks, driveways, flower beds, curbs, and similar areas.

NOTE: Cut at a steady pace. If the blade begins to bog down, you are edging too fast; slow your pace. Do not force the blade into the ground.

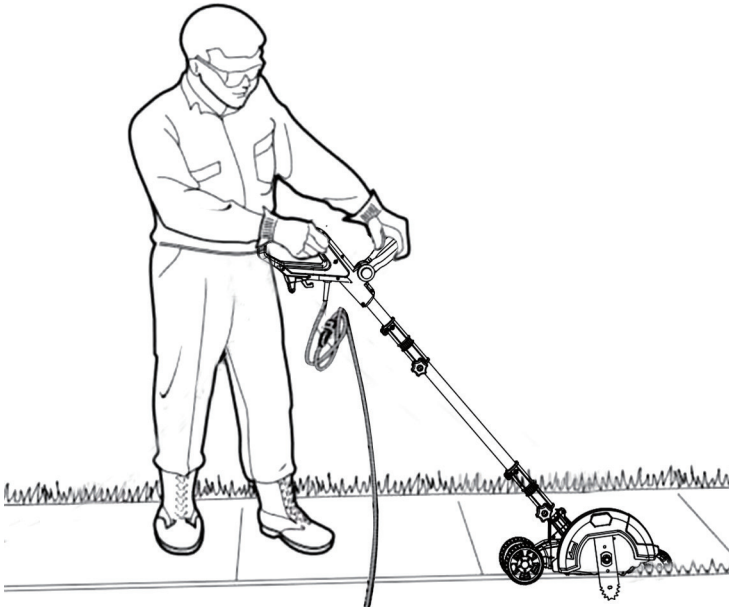



MAINTENANCE


GENERAL

 **WARNING:** When servicing this tool, use only identical replacement parts. The use of any other part may create a hazard or cause product damage.

DO NOT use solvents when cleaning plastic parts. Plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use a clean cloth to remove dirt, dust, oil, grease etc.

 **WARNING:** Do not allow brake fluids, gasoline, petroleum-based fluids, gasoline, petroleum-based products, penetrating oils, etc. to come into contact with plastic parts. They contain chemicals that can damage, weaken or destroy plastic.

 **DO NOT** abuse power tools. Abusive practices can damage the tool and the workplace.


 **WARNING:** DO NOT attempt to modify tools or create accessories. Any such alteration or modification is misuse and could result in hazardous condition leading to possible serious injury. It will also void the warranty.

LUBRICATION


All the bearings in this tool are lubricated with sufficient amount of high-grade lubricant for the life of the unit under normal conditions. Therefore, no further lubrication is required.

Cleaning and storage

- a) Keep the handles oil-free to ensure a secure grip.
- b) If necessary, clean the appliance with a damp cloth and, if necessary, with a mild detergent.

 Before each cleaning, switch off the device. Never immerse the device in water or other liquids for cleaning. Keep the lawn edger/trencher in a safe and dry place and out of the reach of children.

EXPLODED VIEW

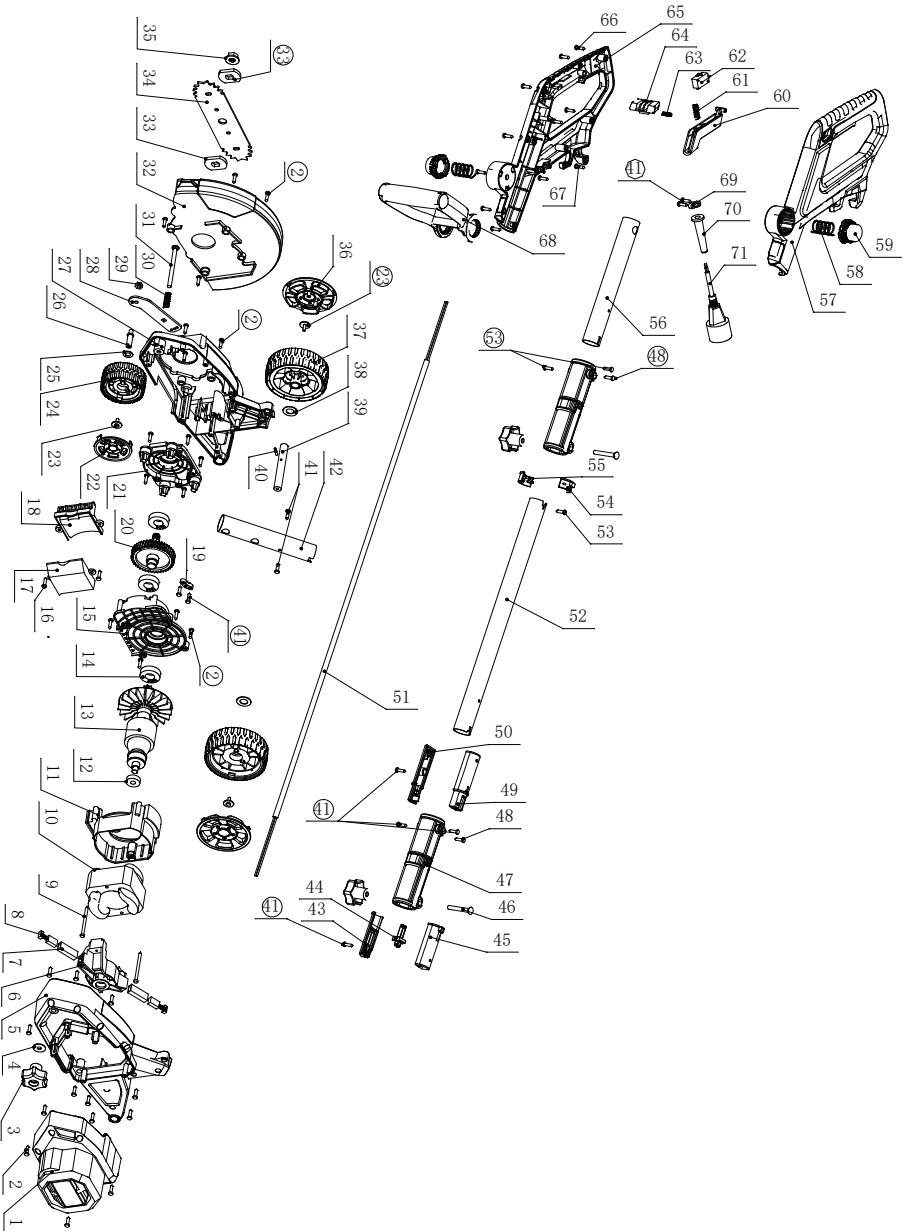

PARTS LIST

⚠ WARNING: When servicing, use only original equipment replacement parts. The use of any other parts may create a safety hazard or cause damage to the lawn edger/trencher.

Any attempt to repair or replace electrical parts on this tool may create a safety hazard unless repairs are performed by a qualified technician. For more information, call the Toll-free Helpline, at 1-866-349-8665; Monday - Friday: 9am to 5pm EST.

Always order by PART number, not key number.

Key #	Part #	Part Name	Quantity
1	ETEG01-01	Motor cover	1
2	ETEG01-02	Screw ST4 x 20	21
3	ETEG01-03	Knob	3
4	ETEG01-04	Shim	1
5	ETEG01-05	Machine cover	1
6	ETEG01-06	Motor bracket	1
7	ETEG01-07	Brush-box	2
8	ETEG01-08	Brush	2
9	ETEG01-09	Screw ST4 x 60	2
10	ETEG01-10	Stator	1
11	ETEG01-11	Lower cover	1
12	ETEG01-12	Bearing 608	1
13	ETEG01-13	Rotor	1
14	ETEG01-14	Bearing 6002	3
15	ETEG01-15	Gear box	1
16	ETEG01-16	Screw ST4 x 12	2
17	ETEG01-17	Air guide hood - upper cover	1
18	ETEG01-18	Air guide hood- undercover	1
19	ETEG01-19	Pressing line plate	1
20	ETEG01-20	Gear	1
21	ETEG01-21	Gearbox cover	1
22	ETEG01-22	Front wheel cover	1
23	ETEG01-23	Screw M5 x 16	3
24	ETEG01-24	Front wheel	1
25	ETEG01-25	Gear gasket	1
26	ETEG01-26	Front axle	1
27	ETEG01-27	Base	1

Key #	Part #	Part Name	Quantity
28	ETEG01-28	Front wheel support plate	1
29	ETEG01-29	Nut	1
30	ETEG01-30	Spring	1
31	ETEG01-31	Bolt M6 x 75	1
32	ETEG01-32	Guard cover	1
33	ETEG01-33	Platen	2
34	ETEG01-34	Blade	1
35	ETEG01-35	Nut	2
36	ETEG01-36	Wheel cover	2
37	ETEG01-37	Wheel	2
38	ETEG01-38	Shim	2
39	ETEG01-39	Rear axle	1
40	ETEG01-40	Spring pin	1
41	ETEG01-41	Screw ST4 x 16	10
42	ETEG01-42	Lower tube	1
43	ETEG01-43	Plug- box cover	1
44	ETEG01-44	Plug	1
45	ETEG01-45	Plug- box holder	1
46	ETEG01-46	Bolt M6 x 45	2
47	ETEG01-47	Pipe joint	2
48	ETEG01-48	Screw ST5 x 20	2
49	ETEG01-49	Plug-box holder	1
50	ETEG01-50	Plug- box cover	1
51	ETEG01-51	Cable	1
52	ETEG01-52	Middle tube	1
53	ETEG01-53	Screw ST4 x 8	3
54	ETEG01-54	Pipe cover	1
55	ETEG01-55	Pipe sleeve bottom	1
56	ETEG01-56	Upper tube	1
57	ETEG01-57	Left handle	1
58	ETEG01-58	Spring	1
59	ETEG01-59	Button	1
60	ETEG01-60	On/Off button	1
61	ETEG01-61	Spring	1
62	ETEG01-62	Micro switch	1

Key #	Part #	Part Name	Quantity
63	ETEG01-63	Spring	1
64	ETEG01-64	Switch	1
65	ETEG01-65	Right handle	1
66	ETEG01-66	Screw ST3.5 x 16	11
67	ETEG01-67	Screw ST3 x 16	1
68	ETEG01-68	Handle	1
69	ETEG01-69	Pressing line plate	1
70	ETEG01-70	Wire protective sleeve	1
71	ETEG01-71	Power cord	1

WARRANTY**12A LAWN EDGER/TRENCHER**

If this Radley tool fails due to a defect in material or workmanship within three years from the date of purchase, return it to any Home Hardware store with the original bill of sale for exchange. This warranty does not include expendable parts including but not limited to blades, brushes, belts and light bulbs.

This warranty covers defects in material or workmanship only. It does not cover normal wear and tear, failure due to abuse/misuse, or defects caused by careless or accidental mishandling. If this Radley product is used for commercial or rental purposes, this warranty does not apply.

12A LAWN EDGER/TRENCHER



Radley[®]

RADLEY TOOLS

ST. JACOBS, ONTARIO N0B 2N0

© 2026 Home Hardware Stores Limited

1-866-349-8665

Customer Service/Tech Support

5073-112

Made in China

**3 Year
warranty**

This Radley[®] product carries a three (3) year LIMITED warranty against defects in workmanship and materials. See Owner's Manual for full details.



800892
ETEG01

**READ ALL INSTRUCTIONS BEFORE FIRST USE.
KEEP THIS MANUAL FOR FUTURE REFERENCE.
KEEP AWAY FROM CHILDREN.**



**WEAR CSA APPROVED
EYE PROTECTION**



**WEAR EAR
PROTECTION**



**WEAR FACE
PROTECTION**