

# Radley®

## 10A • 120V • 60 Hz Snow Shovel



**3 Year  
limited  
warranty**

**12"/30 cm**  
Clearing width  
**Owner's Manual**



READ ALL INSTRUCTIONS BEFORE FIRST USE.  
KEEP THIS MANUAL FOR FUTURE REFERENCE.  
KEEP AWAY FROM CHILDREN.



WEAR CSA APPROVED  
EYE PROTECTION



WEAR EAR  
PROTECTION



## PRODUCT SPECIFICATIONS

12" SNOW SHOVEL	
Voltage	120V - 60Hz
Power	10 A
No load speed	up to 2500 rpm
Torque	11.7"-lbs
Clearing width	12"/30 cm
Clearing depth	6"/15 cm
Discharge distance	up to 20'/6m
Plowing capacity	300 lb / 136 kg/min
LED light	1 Watt
Weight	13.2 lb / 6 kg

### Need Assistance?

Call us on our toll free customer support line:

1-833-818-4111 - Monday through Friday, 9am – 5pm, Eastern Standard Time


- Technical questions
- Replacement parts
- Parts missing from package


## TABLE OF CONTENTS


Product specifications .....	1
Table of contents .....	2
Important safety instructions .....	3
General safety warnings .....	3-4
Training .....	5
Preparation .....	5
Operation .....	6
Clearing a clogged discharge chute .....	6
Maintenance and storage .....	7/16
Double insulated .....	7
Electric shock warning .....	7
Extension cord chart .....	8
Symbols .....	9
Know your 12" snow shovel .....	10
Packaging contents .....	11
Assembly .....	11
Operation .....	12-14
Connecting to a power source .....	12
Securing the extension cord .....	12
Starting and stopping .....	13
Operating tips .....	13
Replacing the paddle .....	14-15
Replacing the belt .....	16
Replacing the scraper blade .....	16
Lubrication .....	16
Warranty .....	17

**IMPORTANT!****SAFETY INSTRUCTIONS****ALL OPERATORS MUST READ THESE INSTRUCTIONS BEFORE USE**

Any electrical appliance can be dangerous if used incorrectly. Some of the safety precautions given in this manual apply generally to many appliances. Other warnings are specific to the use of this electric snow shovel. Always follow these safety guidelines. Failure to do so may result in serious bodily injury or death.


 **DANGER!** This indicates a hazardous situation, which, if not followed, will result in serious injury or death.


 **WARNING!** This indicates a hazardous situation, which, if not avoided, could result in serious injury or death.

 **CAUTION!** This indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

**GENERAL SAFETY****FOR HOUSEHOLD USE ONLY**

Before using, be sure that everyone using this tool reads and understands all safety instructions and other information contained in this manual. Save this manual and review it frequently prior to using this tool and when instructing others on the proper operating procedures.

 **CAUTION!** Wear appropriate hearing protection during use. After long periods of extended use, the noise generated from this appliance may cause hearing loss if your ears are not properly protected.

 **WARNING!** When using electric yard tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:

- 1. Keep work area clean and well-lit** – Cluttered, dark areas invite accidents.
- 2. Replacement parts** – When servicing this unit, use only identical replacement parts. Replace or repair damaged cords immediately.
- 3. Keep children, bystanders, and pets away** – All spectators, including pets, should be kept a safe distance away from the work area.
- 4. Dress properly** – Do not wear loose clothing or jewelry as such articles can get caught in moving parts. Wear a protective covering to contain long hair. Wearing rubber gloves and substantial nonslip footwear is recommended when working outdoors.
- 5. Extension cords** – To prevent electric shock, use only with an extension cord suitable for outdoor use.


**READ ALL INSTRUCTIONS BEFORE USING THIS 12" SNOW SHOVEL**

- 6. Avoid accidental starting** – Do not carry the snow shovel with your finger on the switch. Make sure the switch is off before plugging in the unit.
- 7. Do not abuse the cord** – Never carry the snow shovel by the cord or yank the cord to disconnect it from the receptacle. Keep the cord away from heat, oil, and sharp edges.
- 8. Moving parts** – Keep hands and feet away from moving parts. Keep guards in place and in proper working order.
- 9. Do not force the tool** – It will perform better with less likelihood of personal or mechanical injury if it is used at the rate for which it is designed.
- 10. Wear personal protective equipment** – When using this tool, wear safety glasses with side shields or goggles to provide necessary eye protection. Wear ear defenders to prevent hearing damage. Use a face or dust mask if the work environment is dusty.
- 11. Disconnect the tool** – Disconnect the blower from the power supply when it is not in use, before servicing it, when changing accessories, and when performing any other maintenance task.
- 12. Store idle tool indoors** – When not in use, the blower should be stored indoors in a dry and high or locked-up place out of the reach of children.
- 13. Maintain the electric snow shovel with care** – Follow the applicable maintenance instructions for replacing parts and changing accessories. Lubrication is not required.
- 14. Do not overreach** – Keep proper footing and balance at all times. If the electric snow shovel strikes a foreign object, follow these steps:
  - Stop the electric snow shovel.
  - Inspect for damage.
  - Repair any damage before restarting and operating the snow shovel.

**SAVE THESE INSTRUCTIONS FOR REFERENCE**

## **ADDITIONAL SAFETY INSTRUCTIONS**

This electric snow shovel meets or exceeds the B71.3 specifications of the American National Standards Institute in effect at the time of production. Read and understand the contents of this manual before you start the motor.

 This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Improperly using or maintaining this electric snow shovel could result in injury or death. To reduce this potential, comply with the following safety instructions.

This electric snow shovel can amputate hands and feet if used incorrectly. It can also pick up foreign objects, which can become dangerous projectiles when thrown into the air. Failure to observe the following safety instructions could result in serious personal injury.

## **TRAINING**

Read, understand and follow all instructions on the machine and in the manual before operating this unit. Thoroughly familiarize yourself with the controls and the proper use of the equipment. Know how to stop the unit and disengage the controls quickly.

Children should never be allowed access to the equipment. Adults should never operate the equipment without carefully reading and understanding these instructions.

Keep the area of operation clear of all persons, particularly small children and pets. Exercise caution to avoid slipping or falling.

## **PREPARATION**

Thoroughly inspect the area where the equipment is to be used and remove all doormats, sleds, boards, wires and other foreign objects.

Do not operate the equipment without wearing adequate winter garments. Avoid loose fitting articles of clothing and accessories that can become caught in moving parts. Wear footwear that will improve footing on slippery surfaces.

Do not attempt to clear snow from a gravel or crushed rock surface. This product is intended for use only on paved surfaces.

Never attempt to make any adjustments while the motor is running (except when specifically recommended by the manufacturer).

Always wear safety glasses or eye shields during operation or while performing an adjustment or repair to protect your eyes from foreign objects that may be thrown from the machine.

**READ ALL INSTRUCTIONS BEFORE USING THIS 12" SNOW SHOVEL**

## OPERATION

1. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
2. Exercise extreme caution when operating on or crossing gravel drives, walks or roads. Stay alert for hidden hazards or traffic.
3. After striking a foreign object, stop the motor. Thoroughly inspect the electric snow shovel for any damage, and repair the damage before restarting and operating the electric snow shovel.
4. If the unit should start to vibrate abnormally, stop the motor and check the unit immediately to ascertain the cause. Vibration is generally a sign of trouble.
5. Stop the motor and disconnect the electric snow shovel from the power supply whenever you leave the operating position, when transporting the unit, before unclogging the rotor blade housing and when making any repairs, adjustments or inspections to the unit.
6. When cleaning, repairing or inspecting the electric snow shovel, make sure that all moving parts have come to a complete stop before beginning work.
7. Exercise extreme caution when operating on slopes.
8. Never operate the electric snow shovel without proper guards and other safety devices in place and in proper working order.
9. Never direct the discharge toward people or areas where property damage can occur. Keep children, pets and other bystanders away from the work area.
10. Do not overload the machine capacity by attempting to clear snow at too fast a rate.
11. Look behind and use care when backing up with the electric snow shovel.
12. Make sure the 1 W LED light is operational when using the electric snow shovel at night or under conditions of poor visibility. Always check your footing during operation and keep a firm hold on the handles. Walk, never run, with the unit.

## CLEARING A CLOGGED DISCHARGE CHUTE

Hand contact with the rotating paddle inside the rotor housing is the most common cause of injury associated with electric snow shovels.

Never use your hands to clear a clogged rotor housing.

To clear the rotor housing:

- Shut the motor off and disconnect the unit from the power supply.
- Wait 10 seconds to be sure the rotating paddle have come to a complete stop.
- Always use a clean-out tool, not your hands, to free the rotating paddle.

**SAVE THESE INSTRUCTIONS FOR REFERENCE**

## MAINTENANCE AND STORAGE

- Check all fasteners at frequent intervals for proper tightness to ensure that the equipment is in safe working condition.
- Always refer to the operator's manual for important details, such as how to properly store your electric snow shovel for an extended period of time.
- Maintain or replace safety and instruction labels as needed.
- Run the machine a few minutes after throwing snow to prevent the paddle from freezing.



### **DOUBLE INSULATED: GROUNDING NOT REQUIRED. WHEN SERVICING, USE ONLY IDENTICAL REPLACEMENT PARTS.**

This snow shovel is double insulated, eliminating the need for a separate grounding system. Use only identical replacement parts. Read the instructions before servicing double insulated appliances. Use this snow shovel only as described in this manual.

### **ELECTRICAL SAFETY**

- Ground fault circuit interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for this electric snow shovel. Receptacles are available having built-in GFCI protection and may be used for this measure of safety.
- To prevent electric shock, use only with an extension cord suitable for outdoor use. Before use, check that the extension cord is in good condition. When using an extension cord, make sure to use one heavy enough to carry the current your product will draw. For lengths less than 50 ft (15 m), a No.16 AWG (or greater) extension cord should be used. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating.

### **ELECTRIC SHOCK MAY CAUSE SEVERE INJURY OR DEATH.**

#### **HEED THESE WARNINGS:**

- Do not allow any part of the electric snow shovel to make contact with water while it is in operation. If the product becomes wet while turned off, wipe dry before starting.
- Use only a UL-, CSA- or ETL-rated extension cord for outdoor, all-weather use.
- Do not use an extension cord over 100 ft /30 m.
- Do not touch the product or its plug with wet hands or while standing in water. Wearing rubber or winter boots offers some protection.

**READ ALL INSTRUCTIONS BEFORE USING THIS 12" SNOW SHOVEL**




## EXTENSION CORD CHART


Extension cord length	Up to 50' / 15 m	+ 50'-100' / 15 m - 30 m
Wire Gauge (A.W.G.)	16	14

To reduce the risk of electric shock, this product has a polarized plug (i.e. one blade is wider than the other). Use this appliance only with a polarized UL-, CSA-, or ETL listed extension cord recommended for outdoor, all-weather use. The plug will fit into a polarized extension cord only one way. If the plug does not fit fully into the extension cord, reverse the plug. If the plug still does not fit, obtain a correct polarized extension cord. A polarized extension cord will require the use of a polarized wall outlet. The extension cord plug will fit into the polarized wall outlet only one way. If the plug does not fit fully into the wall outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician to install the proper wall outlet. Do not modify the plug, extension cord receptacle, or extension cord plug in any way. To prevent the snow shovel cord from disconnecting from the extension cord during operation, make a knot with the two cords as shown below.

### METHOD OF SECURING EXTENSION CORD

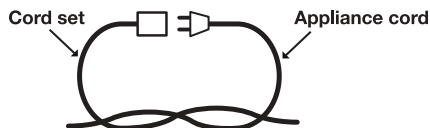

(A) Tie cord as shown

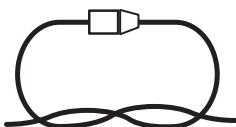

















(B) Connect plug and receptacle

Do not modify the cord. Never pull the snow shovel by the cord or yank the cord to disconnect it from the receptacle. Keep the cord away from heat, oil, and sharp edges.

**SAVE THESE INSTRUCTIONS FOR REFERENCE**


### SYMBOLS

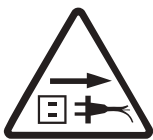The following table depicts and describes safety symbols that may appear on this product. Read, understand, and follow all instructions on the machine before attempting to assemble and operate.

	<b>READ THE OPERATOR'S MANUAL(S)</b> – Read, understand, and follow all instructions in the user manual before attempting to assemble and operate.		Wear hearing protection. Wear eye protection.
	<b>SAFETY ALERT</b> – Indicates a precaution, a warning, or a danger.		<b>WARNING!</b> Do not expose the unit to rain or wet conditions.
	Beware of flying objects and debris.		Keep bystanders and children a safe distance away.
	<b>WARNING!</b> Electrical shock hazard.		<b>DANGER!</b> Cutting/dis-memberment hazard. Keep feet away from rotating paddle.
 	<b>DANGER!</b> Rotating blades pose a serious risk of injury. Keep hands and feet away from openings while the machine is running.		The rotating part will continuously run for several seconds after you turn off the machine.
			Keep the flexible power supply cord away from the rotating paddle.
	Immediately remove the plug from the mains if the power cable is damaged, frayed, or entangled. Always keep the power cable away from heat, oil, and sharp edges.		<b>WARNING!</b> Turn the machine OFF and disconnect it from the power supply before inspecting, cleaning, changing accessories, or conducting any other maintenance task.
	<b>DOUBLE INSULATION</b> – When servicing, use only identical replacement parts.		Wear safety gloves during use to protect hands. Wear safety footwear.

**READ ALL INSTRUCTIONS BEFORE USING THIS 12" SNOW SHOVEL**

## KNOW YOUR 12" SNOW SHOVEL

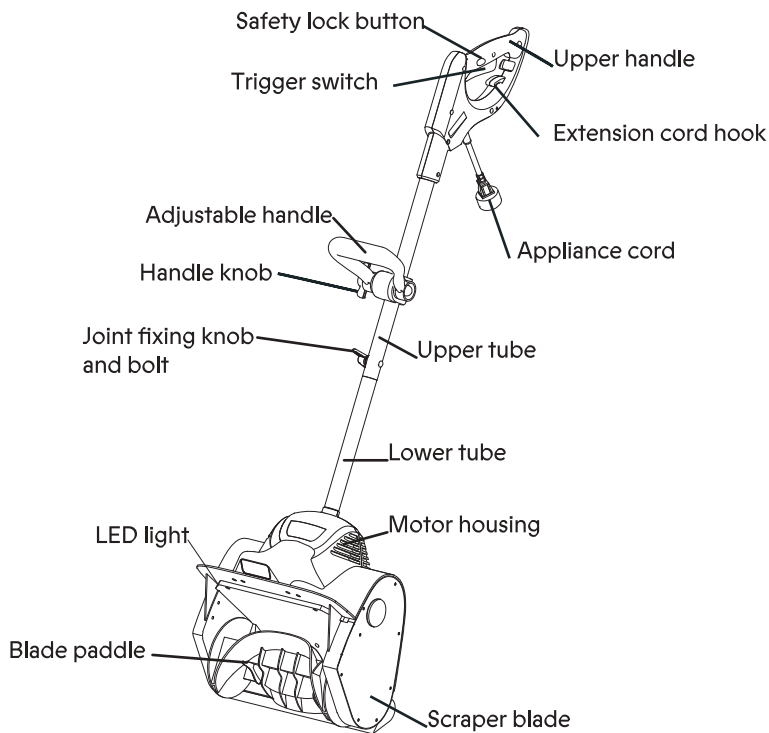

**SAVE THESE INSTRUCTIONS FOR REFERENCE**

### CARTON CONTENTS

- Electric snow shovel
- Joint-fixing knob and bolt
- Adjustable handle and knob
- Manual

1. Carefully remove the electric snow shovel and check to see that all of the above items are supplied.
2. Inspect the product carefully to make sure no breakage or damage occurred during shipping. If you find damaged or missing parts, DO NOT return the unit to the store. Please call the customer service centre at 1-833-818-4111.

**NOTE:** Do not discard the shipping carton and packaging material until you are ready to use the electric snow shovel. The packaging is made of recyclable materials. Properly dispose of these materials in accordance with local regulations.

**IMPORTANT!** The equipment and packaging material are not toys. Do not let children play with plastic bags, foils, or small parts. These items can be swallowed and pose a suffocation risk!

### ASSEMBLY

#### CONNECTING THE UPPER AND LOWER TUBES

1. Fit the upper and lower tubes together and tighten the joint-fixing knob (Fig. 1).
2. Assemble the adjustable handle and tighten the handle knob (Fig. 2 and 3).

**NOTE:** the tip on the lower clip shall be inserted to the slot on the upper tube.

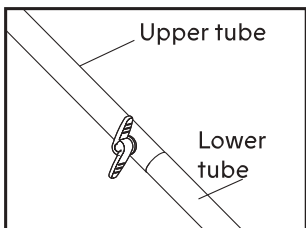


Fig. 1

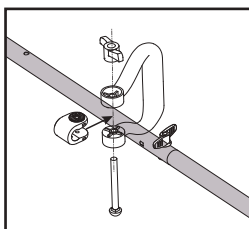


Fig. 2

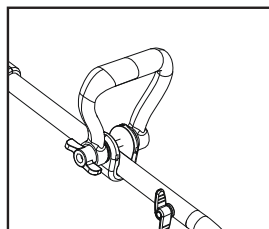


Fig. 3

**READ ALL INSTRUCTIONS BEFORE USING THIS 12" SNOW SHOVEL**

## OPERATION

### CONNECTING TO A POWER SUPPLY

To reduce the risk of electric shock, this appliance has a polarized plug (i.e. one blade is wider than the other; see Fig. 4).

Use this appliance only with a polarized UL-, CSA- or ETL- listed extension cord recommended for outdoor, all-weather use.

The appliance plug will fit into a polarized extension cord only one way. If the appliance plug does not fit fully into the extension cord, reverse the plug. If the plug still does not fit, obtain a correct polarized extension cord. A polarized extension cord will require the use of a polarized wall outlet. The extension cord plug will fit into the polarized wall outlet only one way. If the plug does not fit fully into the wall outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician to install the proper wall outlet. Do not modify the appliance plug, extension cord receptacle or extension cord plug in any way.

**IMPORTANT:** Check the extension cord frequently during use for holes or cracks in the insulation. Do not use a damaged cord. Do not run the cord through standing water or wet grass.

Use only an extension cord recommended for outdoor use.

### SECURING THE EXTENSION CORD

Make a loop with the extension cord (Fig. 5).

Insert the loop through the opening in the back of the upper handle and secure the loop onto the extension cord hook (Fig. 6).

Connect the extension cord to the snow shovel.

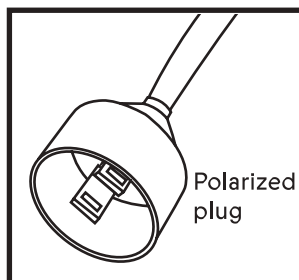


Fig. 4

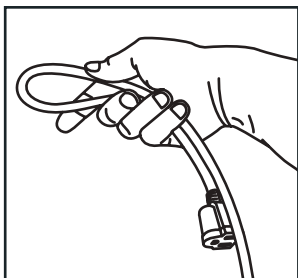


Fig. 5

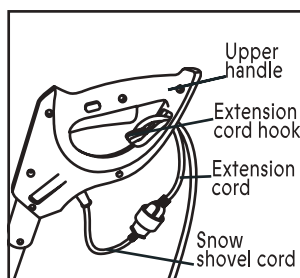


Fig. 6

**SAVE THESE INSTRUCTIONS FOR REFERENCE**

**NOTE:** Securing the extension cord in this way helps to prevent you from accidentally disconnecting the extension cord from the snow shovel during operation.

Plug the extension cord into a wall outlet.

Keep the area to be cleared free of stones, toys or other foreign objects that the rotating paddles might pick up and throw. Such items could be covered by snow and are easy to overlook, so be sure to conduct a thorough inspection of the area before operating the snow shovel.

### STARTING AND STOPPING

To start the electric snow shovel, push and hold the safety lock button on the top of the handle grip with your thumb and then squeeze the trigger switch with your fingers. Once the machine powers on, you can release the safety lock button and proceed with operation (Fig. 7).

To stop the electric snow shovel, release the trigger switch (Fig. 7).

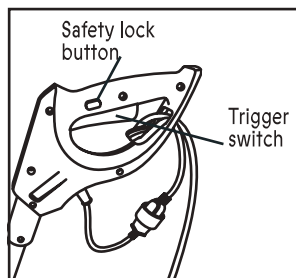


Fig. 7

### OPERATING TIPS

Start the electric snow shovel and tilt it forward until the scraper blade at the base of the unit contacts the ground. Push the shovel forward at a comfortable rate, yet slow enough to clear the path completely. The clearing width of the snow shovel and the depth of snowfall should dictate your forward speed.

Direct the snow discharge to the right or to the left by holding the electric snow shovel at a slight angle. To remove snow most efficiently, throw the snow downwind and slightly overlap each swath.

If you need to clear snow from a crushed rock or gravel surface, push down on the handle to clear the scraper of any loose material that the rotating paddles could throw.

This electric snow shovel cuts a path 12" /30.5 cm wide and up to 6" /15.24 cm deep in one pass.

When clearing deeper drifts, hold the electric snow shovel by the upper and lower handles and use a swinging or sweeping motion. Remove up to 6" /15.24 cm of snow with each pass and repeat as many times as needed.

Keep the cord clear of obstructions, sharp objects and the rotating paddles. Do not pull sharply on the cord or abuse it in any manner. Frequently inspect the cord for signs of damage. If damage is found, replace the cord immediately.

This electric snow shovel is equipped with a 1 W LED light to facilitate clearing at night and under conditions of poor visibility (Fig. 8). When you start the machine, the LED light will automatically power on and illuminate the path in front of you. When you stop the machine, the LED light will automatically power off.

Disconnect the extension cord after using the electric snow shovel. Hang the extension cord with the shovel so it will not be misplaced or damaged.

**⚠ WARNING!** Disconnect the extension cord before performing any maintenance task. If the extension cord is plugged into the snow shovel, someone could accidentally turn on the unit while you are performing maintenance on it, which could result in serious personal injury.

## REPLACING THE PADDLE

**⚠ WARNING!** Disconnect the power supply to the electric snow shovel before beginning work.

Use a wrench to remove the bolt and the washer on the right side of the housing (Fig. 9).

Using a cross-head screwdriver, disassemble the left side cover by removing the seven screws (Fig. 10).

Remove the tensioner. Unscrew the three screws securing the big pulley plate, then remove the plate and pulley assembly (Fig. 11).

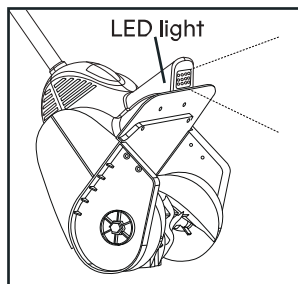


Fig. 8

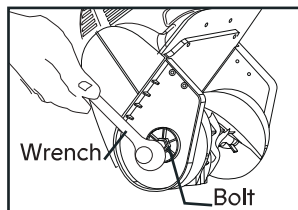


Fig. 9

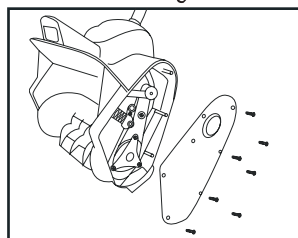


Fig. 10

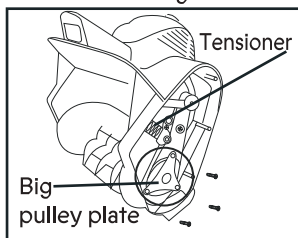


Fig. 11

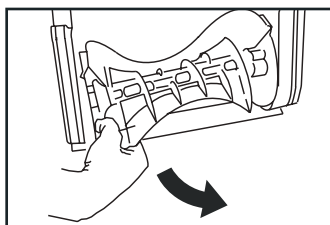


Fig. 12

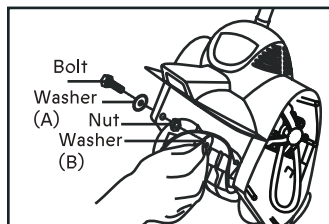


Fig. 13

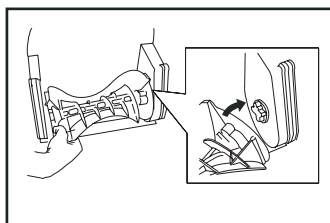


Fig. 14

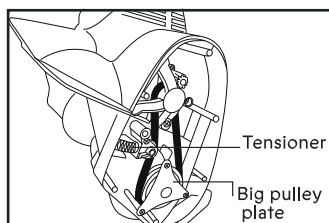


Fig. 15

Remove the old paddle from the housing (Fig. 12).

To install the new paddle, place the washer (A) back onto the bolt (removed in step 1) and insert the bolt so that it protrudes slightly into the housing of the unit. Thread the nut and then the other washer (B) onto the bolt. Fit the new paddles onto the end of bolt and tighten the bolt (Fig. 13).

Reinstall the big pulley plate and align it with the other end of the paddles. After fitting the paddles into position, secure the big pulley plate with the three (3) screws (Fig. 14).

**NOTE:** The housing will flex to allow for installation of the new paddle.

Place the tensioner back into position. Rotate the paddles to ensure that the belt and paddles move freely, then reinstall the cover by securing it with the seven screws (Figs. 15 & 16).

**WARNING!** Do not power the unit until the cover guard is securely in place to prevent damage or injury.

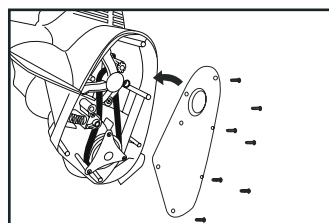


Fig. 16



## REPLACING THE BELT

**⚠ WARNING!** Disconnect the power from the electric snow shovel before performing these tasks.

Disassemble the left side cover by removing the seven screws (Fig. 10).

Remove the tensioner (Fig. 17).

Unscrew the three (3) screws from the big pulley plate and the four (4) screws from the small pulley plate (Fig.17).

Replace the worn belt with a new belt.

Screw the big and small pulley plates back into position, then reinstall the tensioner.

Place the left side cover back into position and refasten the seven screws.

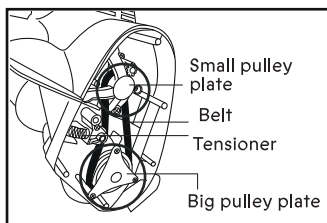


Fig. 17

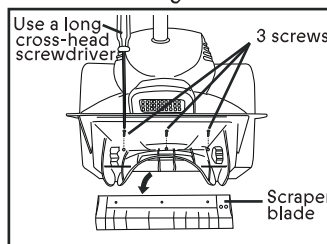


Fig. 18

## REPLACING THE SCRAPER BLADE

**⚠ WARNING!** Disconnect the power from the electric snow shovel before performing these tasks.

Position the paddles so that you can gain access to the three screws that secure the scraper blade to the base of the unit.

Using a long cross-head screwdriver, remove the three screws and the old scraper blade (Fig. 18).

Install the new scraper blade and fasten it securely to the snow shovel with the three screws.

## LUBRICATING THE ELECTRIC SNOW SHOVEL

This electric snow shovel does NOT need lubrication. All bearings are lubricated at the factory for the life of the product.

## STORAGE

Examine the electric snow shovel thoroughly for worn, loose or damaged parts. Should you need to repair or replace a part.

Examine the extension cord thoroughly for signs of excess wear or damage. If it is worn or damaged, replace it immediately.

Disconnect the extension cord from the electric snow shovel before storing.

Store the cord with the electric snow shovel indoors in a clean, dry and locked location out of the reach of children and animals.

**NOTE:** Devices for storing extension cords are commercially available, should you wish to purchase one.



## **WARRANTY**

### **RADLEY ELECTRIC 12" SNOW SHOVEL WARRANTY**

If this Radley tool fails due to a defect in material or workmanship within three years from the date of purchase, return it to any Home Hardware store with the original bill of sale for exchange. This warranty does not include expendable parts including but not limited to blades, brushes, belts, light bulbs and/or batteries. This warranty covers defects in material or workmanship only. It does not cover normal wear and tear, failure due to abuse/misuse, or defects caused by careless or accidental mishandling. If this Radley product is used for commercial or rental purposes, this warranty does not apply.

10A • 120V • 60 Hz

# Snow Shovel

12"/30 cm  
clearing width

3 Year *limited*  
warranty



Radley

EXCLUSIVE TO HOME HARDWARE


For information on the entire line-up of Radley power tools visit [homehardware.ca](http://homehardware.ca) or your local Home Hardware retail store.

MADE IN CHINA / FABRIQUÉ EN CHINE  
HOME HARDWARE STORES LIMITED  
ST. JACQUES, ONTARIO M0G 2N6  
ORDER ONLINE / COMMANDER EN LIGNE  
[homehardware.ca](http://homehardware.ca)  
© 2011 / 2011 Home Hardware Stores Limited



5554-511

### EXPLODED VIEW

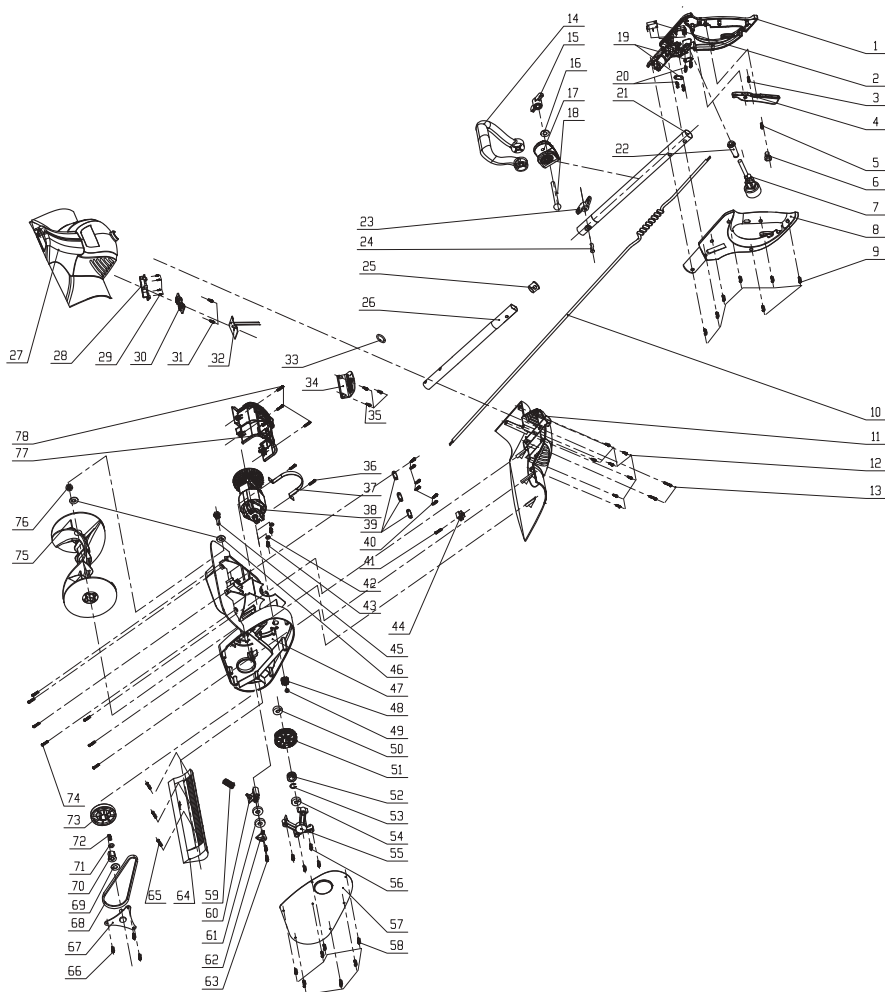

## PARTS LIST

**⚠ WARNING:** When servicing, use only original equipment replacement parts. The use of any other parts may create a safety hazard or cause damage to the 12" snow shovel. Any attempt to repair or replace electrical parts on this 12" snow shovel may create a safety hazard unless repairs are performed by a qualified technician. For more information, call the Toll-free Helpline, at 1-833-818-4111 — Monday-Friday, from 9am - 5pm, Eastern Standard Time. Always order by PART NUMBER, not by key number.

Key #	Part #	Part Name	Quantity
1	1053443003	Right handle	1
2	2401405001	Microswitch	1
3	1350333001	Trigger spring	1
4	1053445002	Trigger	1
5	1350334001	Spring	1
6	1053444002	Safety button	1
7	2400780001	External cable	1
8	1053442003	Left handle	1
9	2600535001	Cross recessed pan head tapping screws ST4.2x19	7
10	2400781001	Spring line	1
11	1053447003	Back cover	1
12	2600535001	Cross recessed pan head tapping screws ST4.2x19	7
13	2600538001	Screw ST4.2 x256	2
14	1053466002	Pull ring	1
15	1001717002	Lock nut	1
16	2600416001	Washer 8	1
17	1053467002	Tab clamp	1
18	1252507001	Bolt	1
19	1050218001	Pressing line	2
20	2600533001	Cross recessed pan head tapping screw ST4.2x16	4
21	1253285002	Straight pipe with groove	1
22	1053513001	Cable sheath	1
23	1051773007	Butterfly nut	1
24	1252492001	Bolt	1
25	1053452001	Thin pipe protective wire sleeve	1
26	1253848001	Interior straight pipe	1
27	1054380002	CTC front cover	1
28	1053462001	Lampshade	1
29	2600511001	Screw ST2.9x9.5	4
30	1054379001	Reflector panel	1
31	2600532001	Cross recessed pan head tapping screw ST4.2x13	2
32	2401137001	Snow shovel integrated light panel	1
33	2700085001	Waterproof ring	1
34	1053463001	Cover plate	1
35	2600511001	Screw ST2.9x9.5	3
36	2600535001	Cross recessed pan head tapping screws ST4.2x19	2

Key #	Part #	Part Name	Quantity
37	1252513001	Strap	1
38	1001722001	Motor assembly	1
39	1050218001	Pressing line	3
40	2600533001	Cross recessed pan head tapping screws ST4.2x16	6
41	2600876001	Cross recessed pan head tapping screws ST3.5x19	1
42	B504004	Flat washer 4	2
43	2600533001	Cross recessed pan head tapping screws ST4.2x16	2
44	2400628000	Wiring bank	1
45	1252508001	Threaded shaft	1
46	2600442001	Washer 10	1
47	1053448003	Main box	2
48	1252510001	Pinion	1
49	2600140001	Lock nut M6	1
50	2600805001	Bearing 6000-2Z	1
51	1001719001	Big gear assembly	1
52	12525111001	Small pulley	1
53	2600688001	External circlip 14	1
54	2600805001	Bearing 6000-2Z	1
55	1053450001	Intermediate shaft bracket	1
56	2600535001	Cross recessed pan head tapping screws ST4.2x19	4
57	1252509004	Side plate	1
58	2600535001	Cross recessed pan head tapping screws ST4.2x19	7
59	1350335001	Tension spring	1
60	1053454001	Tension wheel frame	1
61	2600820001	Bearing 6001-2Z	2
62	1053461001	Tension wheel frame pressing plate	1
63	2600533001	Cross recessed pan head tapping screws ST4.2x16	2
64	1053449001	Snowplow board	1
65	2600535001	Cross recessed pan head tapping screws ST4.2x19	3
66	2600549001	Screw ST4.8x19	3
67	1001720001	Large pulley bracket	1
68	1400189001	Belt	1
69	1252514001	Washer	1
70	1200165001	Large pulley bushing	1
71	1252470001	Flat washer	1
72	2600308001	Cross recessed pan head tapping screw M510	1
73	1053451001	Large pulley	1
74	2600535001	Cross recessed pan head tapping screws ST4.2x19	1
75	1001721001	Snowplow assembly	1
76	2600158001	Type 1 hex nut	1
77	1053453001	Motor rain cover	1
78	2600533001	Cross recessed pan head tapping screws ST4.2x16	3