

Radley®

12" ELECTRIC Snow Shovel

*3 Year
limited warranty*

*12" / 30.5cm
Clearing Width
Owner's Manual*

10Amp



**READ ALL INSTRUCTIONS BEFORE FIRST USE.
KEEP THIS MANUAL FOR FUTURE REFERENCE.
KEEP AWAY FROM CHILDREN.
SEE NEXT PAGE FOR CRITICAL TOOL RELATED
PRECAUTIONS.**



**WEAR CSA APPROVED
EYE PROTECTION**



**WEAR EAR
PROTECTION**



**WEAR A
FACE MASK**

PRODUCT SPECIFICATIONS

12" ELECTRIC SNOW SHOVEL-10A	
Voltage	120V-60Hz, 10A
No-load speed	3,600 RPM
Max clearing width	12" (30.5cm)
Max clearing depth	6" (15.2cm)
Max throwing distance	20' (6m)
Tool operating weight	9 lb (4.1 kg)

CRITICAL TOOL RELATED PRECAUTIONS

1. Keep hands/feet away from auger and discharge opening. Turn off and unplug before clearing clogs or servicing.
2. Use a $\geq 10A$ outdoor, cold-weather cord. Keep clear of auger. Do not use in wet conditions or with damaged cords.
3. Clear debris. Do not aim shovel at people, vehicles, or windows. Keep others at a safe distance.

READ ALL SAFETY, WARNING, PRECAUTIONS AND MAINTENANCE INFORMATION PROVIDED IN THIS MANUAL.

NEED ASSISTANCE?

- Technical questions
- Replacement parts
- Parts missing from package

Scan here for support

Email us at: customerservice@powertoolsplus.ca
 Call us on our toll-free customer support line:
 1-866-349-8665 (9-5pm Monday-Friday EST)



EXTENSION CORD SAFETY



When using an extension cord with your electric tool refer to the following table to determine the required AWG wire size. Before using your tool make sure the power cord and extension cord are in good working conditions. Make repairs or replacements before using the tool. Only use extension cords that are rated for outdoor use.



WARNING: Consult the extension guide table to ensure the correct extension cord is used with the tool. Use of an extension cord that is insufficiently rated for the tool may result in tool under-performance, overheating, fire, and tool failure.



WARNING: Keep the extension cord clear of the working area. Position the cord so that it will not get caught on the workpiece, tools or any other obstructions while you are working with the power tool.

Make sure any extension cord used with this tool is in good condition. When using an extension cord, be sure to use one of heavy enough gauge to carry the current the tool will draw. An undersized cord will cause a drop in voltage resulting in loss of power and overheating.

The table below shows the correct size to use according to cord length and name plate ampere rating. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord.

Be sure your extension cord is properly wired and in good condition. Always replace a damaged extension cord or have it repaired by a qualified electrician before using it. Protect your extension cord from sharp objects, excessive heat and damp or wet areas.

Use a separate electrical circuit for your power tools. This circuit must not be less than 14 gauge wire and should be protected with either a 15AMP time delayed fuse or circuit breaker. Before connecting the power tool to the power source, make sure the switch is in the OFF position and the power source is the same as indicated on the nameplate. Running at lower voltage will damage the motor.

120V OUTDOOR GRADE EXTENSION CORD LENGTH & GAUGE GUIDE

Outdoor Rated		Total length			
More than	Not more than	25' /7.5 m	50' /15 m	100' /30 m	150' /45 m
0	6A	18	16	16	14
6A	10A	18	16	14	12
10A	12A	16	16	14	12
13A	16A	14	12	Not Applicable	

NOTE: BOLDED VALUES ARE RECOMMENDATIONS FOR THIS TOOL

To reduce the risk of disconnect of tool from the extension cord during operation. Make a knot as shown in Fig. 1

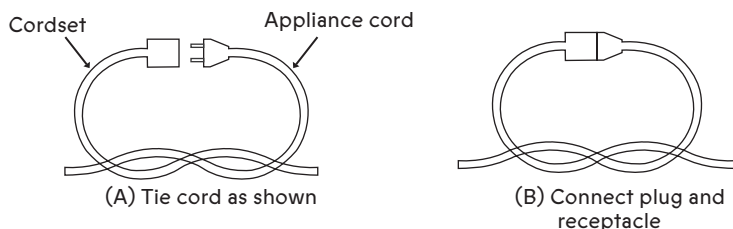 


FIG. 1

⚠ WARNING: Use a plug receptacle retaining strap to ensure a proper connection and to ensure there is no strain on the connection. A poor or strained connection can lead to sparking, voltage drop and damage to the tool, overheating, intermittent tool operation, and fire.

Avoid unintentional starting - Turn off the power switch and disconnect the power cord before making any adjustments to the unit and before inspecting, servicing, changing accessories or cleaning.

Handle cord carefully - Never pull electric tool by cord or yank it to disconnect from the power source. Keep cord away from heat, oil, and sharp edges.

Don't force electric tool - it will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.

Don't overreach - Keep proper footing and balance at all times.

Stay Alert - Watch what you are doing. Use common sense. Do not operate tool when you are tired or under the influence of alcohol, drugs, or medications that cause drowsiness.

Disconnect electric tool - Disconnect the electric tool from the power supply when not in use, before servicing, when changing accessories.

Keep guards in place.

Keep hands and feet away from moving parts.

TABLE OF CONTENTS

Product Specifications.....	1
Extension Cord Safety	2-3
Table of Contents	4
General Safety Warnings	5-8
Service	8
Specific Snow Shovel Safety Rules	9-10
Safety Symbols	11
Know Your Snow Shovel	12
Assembly And Operation	13-15
Maintenance	16
Exploded View	17
Parts List	18-19
Warranty	20

GENERAL SAFETY WARNINGS

⚠ WARNING: To avoid serious personal injury, do not attempt to use this product until you have read this instruction manual thoroughly and understand it completely. If you do not understand the warnings and instructions in this manual, do not use this product. Call 1-866-349-8665 for assistance. The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and when needed, a full-face shield. We recommend a wide vision safety mask for use over eyeglasses or standard safety glasses with eye shields. Always use eye protection which is marked to comply with ANSI Z87.1 or CSA requirements. Prescription glasses ARE NOT a replacement for proper eye protection.

SAFETY SYMBOLS

The purpose of safety symbols is to alert you of the potential safety RISKS. Recognize and understand them. Follow the instructions provided.

SYMBOL	MEANING
 DANGER	Failure to obey a DANGER safety alert WILL result in serious personal injury or death to you or to others. Always obey all messages following this symbol to reduce the risk of serious personal injury or death.
 WARNING	Failure to obey a WARNING safety alert MAY result in serious personal injury or death to you or to others. Always obey all messages following this symbol to reduce the risk of potential serious personal injury or death.
 CAUTION	Failure to obey a CAUTION safety alert MAY result in personal injury or property damage to you or to others. Always obey all messages following this symbol to reduce the risk of personal injury or property damage.
CAUTION NOTICE	Failure to obey a NOTICE or a CAUTION (without a safety alert) MAY result in property damage to you or to others. Always obey all messages following this symbol to reduce the risk of property damage.
 DANGER  	ALWAYS WEAR EYE PROTECTION THAT CONFORMS WITH CSA Z94.3 OR ANSI SAFETY STANDARD Z87.1 FLYING DEBRIS can cause permanent eye damage. Prescription eyeglasses ARE NOT a replacement for proper eye protection. The usage of a safety standard compliant face shield placed over proper safety glasses or goggles can reduce the risk of facial injury. NON-COMPLIANT EYEWEAR CAN CAUSE SERIOUS INJURY IF BROKEN DURING THE OPERATION OF A POWER TOOL.

SYMBOL	MEANING
⚠ WARNING 	USE HEARING PROTECTION, PARTICULARLY DURING EXTENDED PERIODS OF OPERATION OF THE TOOL, OR IF THE OPERATION IS NOISY.
⚠ WARNING 	WEAR A DUST MASK THAT IS DESIGNED TO BE USED WHEN OPERATING A POWER TOOL IN A DUSTY ENVIRONMENT.
⚠ WARNING   	ALWAYS WEAR NON-SLIP GLOVES THAT FIT PROPERLY TO PROTECT YOUR HANDS AND TO HELP YOU GRIP THE TOOL. ALWAYS WEAR STURDY CLOTHING WITH LONG SLEEVES AND LONG PANTS. NEVER OPERATE THE TOOL WHILE WEARING SHORTS, SHORT SLEEVE SHIRT OR WHILE SHIRTLESS. ALWAYS WEAR NON-SLIP SAFETY BOOTS TO PREVENT FOOT INJURIES AND SLIPPING THAT COULD CAUSE LOSS OF CONTROL OF THE TOOL.
⚠ WARNING 	TO AVOID ELECTRICAL HAZARDS, FIRE HAZARDS OR DAMAGE TO THE TOOL, USE PROPER CIRCUIT PROTECTION. This tool is wired at the factory for 120 V AC operations. It must be connected to a 120 V AC, 15 A circuit that is protected by a time-delayed fuse or circuit breaker. To avoid shock or fire, replace power cord immediately if it is worn, cut or damaged in any way.

GENERAL POWER TOOL SAFETY WARNINGS

 **WARNING: Read all safety warnings and all instructions.** Failure to comply with safety instructions and instructions may cause electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) WORK AREA SAFETY

- a) **Keep your work area clean and well lit.** Disorder or unlit work areas can lead to accidents.
- b) **Do not operate the power tool in an explosive environment where flammable liquids, gases or dusts are present.** Power tools generate sparks that can ignite the dust or fumes.
- c) **Keep children and other persons away while using the power tool.** If distracted, you may lose control of the device.

2) ELECTRICAL SAFETY

- a) **The power tool connector must fit into the socket.** The plug must not be changed in any way. Do not use adapter plugs with grounded power tools. Unchanged plugs and suitable sockets reduce the risk of electric shock.
- b) **Avoid body contact with grounded surfaces such as pipes, heaters, stoves and refrigerators.** There is an increased risk of electric shock if your body is grounded.
- c) **Keep power tools away from rain or moisture.** The penetration of water into a power tool increases the risk of electric shock.
- d) **Do not misuse the cable to carry, hang or unplug the power tool.** Keep the cable away from heat, oil, sharp edges or moving equipment parts. Damaged or tangled cables increase the risk of electric shock.
- e) **If you are working with a power tool outdoors, use only extension cables that are also suitable for outdoor use.** Using an outdoor extension cable reduces the risk of electric shock.
- f) **If the operation of the power tool in a damp environment is unavoidable, use a residual current circuit breaker.** The use of a residual current circuit breaker reduces the risk of electric shock.

3) PERSONAL SAFETY

- a) **Be attentive, pay attention to what you are doing, and start working with a power tool with reason.** Do not use power tools if you are tired or under the influence of drugs, alcohol or medication. A moment of inattention when using the power tool can lead to serious injuries.

- b) **Wear personal protective equipment and always goggles.** Wearing personal protective equipment, such as a dust mask, non-slip safety shoes, protective helmet or hearing protection, depending on the type and use of the power tool, reduces the risk of injury.
- c) **Avoid accidental starting.** Make sure the power tool is switched off before connecting or carrying it to the power supply and/or battery. If you have your finger on the switch while wearing the power tool or connect the device to the power supply when it is switched on, this can lead to accidents.
- d) **Remove adjustment tools or wrenches before turning on the power tool.** A tool or key located in a rotating part of the device may cause injury.
- e) **Avoid abnormal posture. Ensure a secure stance and maintain balance at all times.** This allows you to better control the power tool in unexpected situations.
- f) **Wear appropriate clothing. Do not wear loose clothing or jewellery.** Keep hair, clothing and gloves away from moving parts. Loose clothing, jewellery or long hair can be caught by moving parts.

4) USE AND TREATMENT OF THE POWER TOOL

- a) **Do not force the tool** – It will perform better with less likelihood of personal injury or mechanical damage if it is used at the rate for which it was designed.
- b) **Do not use a power tool whose switch is defective.** A power tool that can no longer be switched on or off is dangerous and needs to be repaired.
- c) **Disconnect the tool** – Disconnect the electric snow shovel from the power supply when it is not in use, before servicing it, when changing accessories and when performing any other maintenance task.
- d) **Store idle tool indoors** – When not in use, the electric snow shovel should be stored indoors in a dry, locked place out of the reach of children.
- e) **Maintain the electric snow shovel with care** – Follow the applicable maintenance instructions for replacing parts and changing accessories. Lubrication is not required.
- f) **Use power tools, accessories, insert tools, etc. in accordance with these instructions.** Take into account the working conditions and the job to be performed. The use of power tools for applications other than those intended can lead to dangerous situations.

SERVICE

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

SPECIFIC SNOW SHOVEL SAFETY RULES

 **WARNING:** Read, understand and follow all instructions on the machine and in the manual before operating this unit. Thoroughly familiarize yourself with the controls and the proper use of the equipment. Know how to stop the unit and disengage the controls quickly.

- Children should never be allowed access to the equipment. Adults should never operate the equipment without carefully reading and understanding these instructions.
- Keep the area of operation clear of all persons, particularly small children and pets.
- Exercise caution to avoid slipping or falling.
- Thoroughly inspect the area where the equipment is to be used and remove all doormats, sleds, boards, wires and other foreign objects.
- Do not operate the equipment without wearing adequate winter garments. Avoid loose fitting articles of clothing that can become caught in moving parts. Wear footwear that will improve footing on slippery surfaces.
- Do not attempt to clear snow from a gravel or crushed rock surface. This product is intended for use only on paved surfaces.
- Never attempt to make any adjustments while the motor is running (except when specifically recommended by the manufacturer).
- Always wear safety glasses or eye shields during operation or while performing an adjustment or repair to protect your eyes from foreign objects that may be thrown from the machine.
- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
- Exercise extreme caution when operating on or crossing gravel drives, walks or roads. Stay alert for hidden hazards or traffic.
- After striking a foreign object, stop the motor. Thoroughly inspect the snow shovel for any damage, and repair the damage before restarting and operating the snow shovel.
- If the unit should start to vibrate abnormally, stop the motor and check the unit immediately to ascertain the cause vibration is generally a sign of trouble.
- Stop the motor and unplug whenever you leave the operating position, when transporting the unit, before unclogging the rotor blade housing and when making any repairs, adjustments or inspections to the unit.
- When cleaning, repairing or inspecting the snow shovel, make sure that all moving parts have come to a complete stop before beginning work.
- Exercise extreme caution when operating on slopes.
- Never operate the snow shovel without proper guards and other safety devices in place and in proper working order.
- Never direct the discharge toward people or areas where property damage can occur. Keep children, pets and other bystanders away from the work area.
- Do not overload the machine capacity by attempting to clear snow at too fast a rate.

- Look behind and use care when backing up with the snow shovel.
- Never operate the snow shovel without good visibility or light. Always be sure of your footing, and keep a firm hold on the handles. Walk, never run, with the unit.

 **WARNING:** Hand contact with the rotating auger inside the motor housing is the most common cause of injury associated with snow shovels. Never use your hands to clear a clogged motor housing.

To clear the rotor housing:

- Disconnect the power supply.
- Wait 10 seconds to be sure the auger has come to a complete stop.
- Always use a clean-out tool, not your hands, to free the rotating auger.

MAINTENANCE AND STORAGE

Check all fasteners at frequent intervals for proper tightness to ensure that the equipment is in safe working condition.

Always refer to the operator's manual for important details, such as how to properly store your snow shovel for an extended period of time.

Maintain or replace safety and instruction labels as needed.

Run the machine a few minutes after throwing snow to prevent the auger from freezing.

SAFETY SYMBOLS

⚠ WARNING: Some of the following symbols may appear on the snow shovel. Study these symbols and learn their meaning. Proper interpretation of these symbols will allow for more efficient and safer operation of this tool.

	READ THE OPERATOR'S MANUAL(S)- Read understand and follow all instructions in the user manual(s) before attempting to assemble and operate.
	SAFETY ALERT -Indicates a precaution, a warning or a danger.
	Wear hearing protection. Wear eye protection. Wear breathing protection.
	Wear safety gloves during use to protect hands.
	Do not use hands to unclog chute.
	Keep hands, feet and clothing away from the rotating auger to avoid injury.
	The rotating part will continuously run for several seconds after you turn off the machine.

	WARNING! Do not expose the unit to rain or wet conditions. Keep dry.
	DANGER! Cutting/ dismemberment hazard - Keep feet away from the rotating auger.
	CAUTION! Beware of stones and other foreign objects that could be thrown from the appliance.
	Wear safety footwear at all times to provide protection against objects that may accidentally fall on feet.
	DANGER! Cutting/ dismemberment hazard - Keep hands away from the rotating auger. Do not use hands to unclog rotor housing. Stop motor before removing debris.
	Keep bystanders and children a safe distance (at least 11 yd/10 m) away from the work area.
	Indoor use only. Only use battery charger indoors.



This symbol designates that this tool is listed with Canadian and U.S requirements by cSUDus Testing Laboratories, Inc.
UL 1090 C22.2 NO.147-15

KNOW YOUR 12" SNOW SHOVEL



ASSEMBLY AND OPERATION

ASSEMBLING THE UPPER AND LOWER SHAFTS

⚠ WARNING: Always wear eye and ear protection, appropriate respiratory mask, non-slip heavy-duty gloves, and substantial footwear while operating the product. Do not operate the product when barefoot or wearing open sandals.

⚠ WARNING: Always unplug the snow shovel before making any adjustments or performing maintenance.

1. Position the Shafts

- Place the upper shaft (1) above the lower shaft (2).
- Ensure the fixing groove (3) on the lower shaft is facing the back of the shovel, as shown (Fig. 1).

2. Connect the Shafts

 
 
- Slide the upper shaft straight into the lower shaft. Push firmly until it is fully seated and cannot go any further.

IMPORTANT: Ensure the upper shaft is pushed in all the way so the screw hole in the upper shaft lines up with the fixing groove in the lower shaft.

- Once aligned, insert the locking screw through the screw hole in the upper shaft.

3. Secure the shafts

- Hand-tighten the shaft locking knob (1) to secure the upper and lower shafts together (Fig. 2).

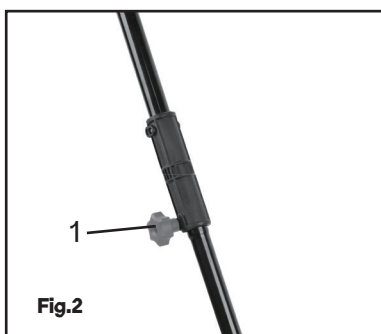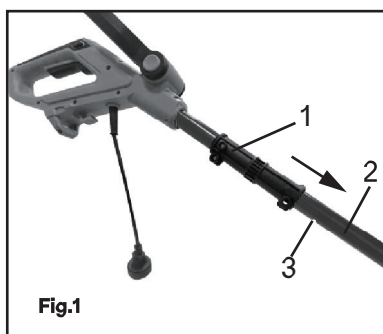

ADJUSTING THE AUXILIARY HANDLE

Press and hold both auxiliary handle adjustment buttons (1) at the same time to adjust the handle position. The handle can rotate up to 180° (see Fig. 3).

Note: Do not attempt to forcefully adjust the handle by pressing only one adjustment button, as this may cause damage.



Fig.3

LOCK-OFF SAFETY AND ON/OFF TRIGGER SWITCHES

The snow shovel is equipped with both a lock-off safety switch and On/Off trigger switch.

To turn the snow shovel ON:

1. Press the lock-off safety switch (1) either all the way to the right or the left and hold (Fig.4).
2. While continuing to press the lock-off switch, squeeze the On/Off trigger switch (2).
3. Once the snow shovel starts, release the lock-off switch while continuing to squeeze the On/Off trigger switch. The snow shovel will continue to run while the On/Off trigger switch is squeezed.
4. To turn the snow shovel OFF, release the trigger switch.

NOTE: To restart the snow shovel, press the lock-off safety switch as instructed in instruction # 1 above and squeeze the trigger switch.

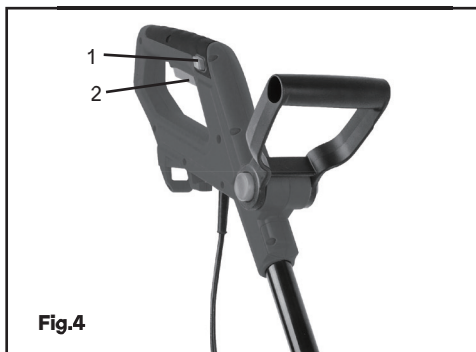 


Fig.4

OPERATING

 **WARNING:** Always use two hands to operate the product. Hold the product with one hand on the rear handle and the other hand on the auxiliary handle.

 **WARNING:** When connecting the power supply, please keep your hands away from the lock off safety & On/Off trigger switches to avoid accidentally starting the product.

1. Connect the snow shovel to the power supply.
2. Press and hold the lock-off safety switch, and squeeze the on/off trigger to power on the tool.
3. Start the snow shovel. Push the shovel forward at a comfortable rate, yet slow enough to clear the path completely. The clearing width of the snow shovel and the depth of snowfall should dictate your forward speed.
4. Direct the snow discharge to the right or to the left by holding the snow shovel at a slight angle.
5. To remove snow most efficiently, throw the snow downwind and slightly overlap each swath.
6. This snow shovel cuts a path 12"/30.5 cm wide and up to 6"/15.2 cm deep.
7. When clearing deeper drifts, hold the snow shovel by the rear (main) and auxiliary handles and use a swinging or sweeping motion.

MAINTENANCE

GENERAL

-  **WARNING:** When servicing this tool, use only identical replacement parts. The use of any other part may create a hazard or cause product damage.

DO NOT use solvents when cleaning plastic parts. Plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use a clean cloth to remove dirt, dust, oil, grease etc.

-  **WARNING:** Do not allow brake fluids, gasoline, petroleum-based fluids, gasoline, petroleum-based products, penetrating oils, etc. to come into contact with plastic parts. They contain chemicals that can damage, weaken or destroy plastic.

-  **DO NOT** abuse power tools. Abusive practices can damage the tool and the workplace.

-  **WARNING:** DO NOT attempt to modify tools or create accessories. Any such alteration or modification is misuse and could result in hazardous condition leading to possible serious injury. It will also void the warranty.

LUBRICATION

 
All the bearings in this tool are lubricated with sufficient amount of high-grade lubricant for the life of the unit under normal conditions. Therefore, no further lubrication is required.

Cleaning and storage

- a) Keep the handles oil-free to ensure a secure grip.
- b) If necessary, clean the appliance with a damp cloth and, if necessary, with a mild detergent.

-  Before each cleaning, switch off and unplug the device.. Never immerse the device in water or other liquids for cleaning. Keep the snow shovel in a safe and dry place and out of the reach of children.

EXPLODED VIEW

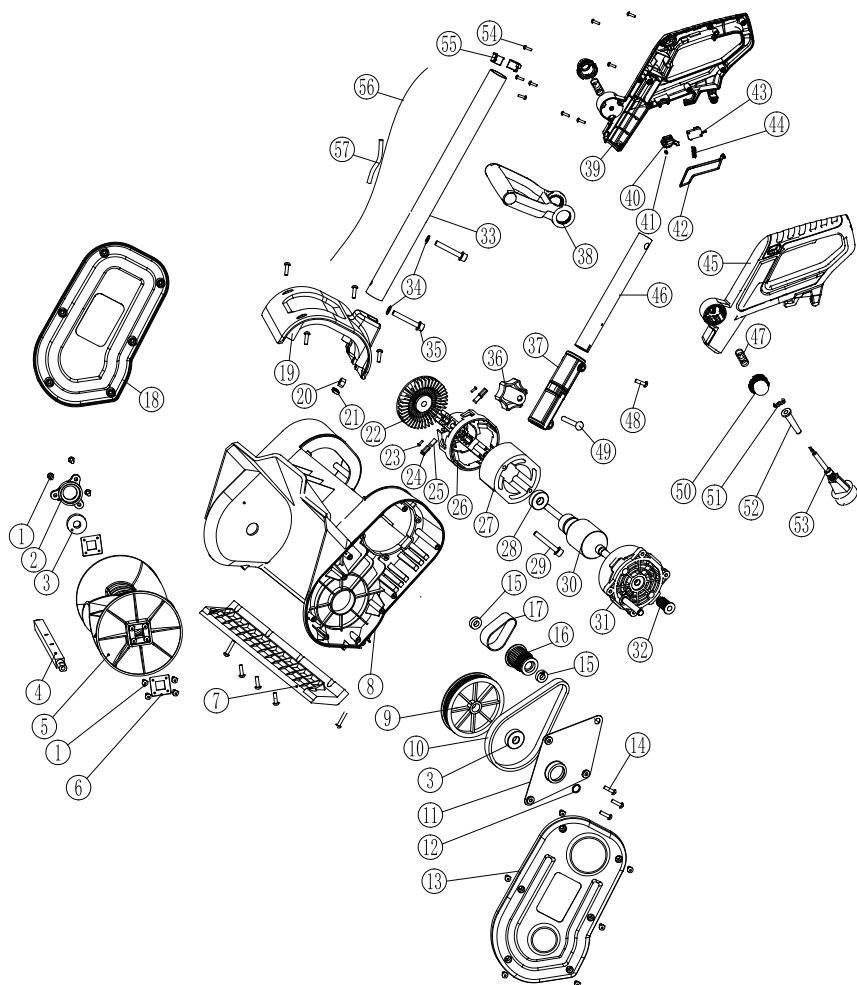

PARTS LIST

WARNING: When servicing, use only original equipment replacement parts. The use of any other parts may create a safety hazard or cause damage to the snow shovel.

Any attempt to repair or replace electrical parts on this tool may create a safety hazard unless repairs are performed by a qualified technician. For more information, call the Toll-free Helpline, at 1-866-349-8665; Monday - Friday: 9am to 5pm EST.

Always order by PART number, not key number.

Key #	Part #	Part Name	Quantity
1	SPEG03-01	Screw ST4x14	11
2	SPEG03-02	Bearing cover 6000	1
3	SPEG03-03	Bearing 6000	2
4	SPEG03-04	Shaft	1
5	SPEG03-05	Auger	1
6	SPEG03-06	Square axis plate	2
7	SPEG03-07	Scraper	1
8	SPEG03-08	Housing	1
9	SPEG03-09	Wheel	1
10	SPEG03-10	Belt	1
11	SPEG03-11	Support plate	1
12	SPEG03-12	Circlip	1
13	SPEG03-13	Right housing cover	1
14	SPEG03-14	Screw ST4x16	32
15	SPEG03-15	Bearing 688	2
16	SPEG03-16	Wheel	1
17	SPEG03-17	Timing belt	1
18	SPEG03-18	Left housing cover	1
19	SPEG03-19	Upper cover	1
20	SPEG03-20	Nut	2
21	SPEG03-21	Pressing line plate	1
22	SPEG03-22	Gear	1
23	SPEG03-23	Screw ST3x8	2
24	SPEG03-24	Brush holder	2
25	SPEG03-25	Carbon brush	2
26	SPEG03-26	Upper cover	1
27	SPEG03-27	Stator	1

Key #	Part #	Part Name	Quantity
28	SPEG03-28	Bearing 608	1
29	SPEG03-29	Screw ST5x65	2
30	SPEG03-30	Rotor	1
31	SPEG03-31	Lower end cover	1
32	SPEG03-32	Wheel	1
33	SPEG03-33	Lower shaft	1
34	SPEG03-34	Flat washer	2
35	SPEG03-35	Screw M5x32	2
36	SPEG03-36	Knob	1
37	SPEG03-37	Shaft connector	1
38	SPEG03-38	Auxiliary handle	1
39	SPEG03-39	Handle	1
40	SPEG03-40	Lock button switch	1
41	SPEG03-41	Lock button spring	1
42	SPEG03-42	Switch button	1
43	SPEG03-43	Micro switch	1
44	SPEG03-44	Spring	1
45	SPEG03-45	Handle	1
46	SPEG03-46	Upper shaft	1
47	SPEG03-47	Spring	2
48	SPEG03-48	Screw ST5x20	1
49	SPEG03-49	Screw M6x45	1
50	SPEG03-50	Button	2
51	SPEG03-51	Pressing line plate	1
52	SPEG03-52	Wire protective sleeve	1
53	SPEG03-53	Power cord	1
54	SPEG03-54	Screw ST3.5x16	9
55	SPEG03-55	Connecting sleeve	2
56	SPEG03-56	Connecting wire	1
57	SPEG03-57	Heat shrink tubing	1

WARRANTY**12" ELECTRIC SNOW SHOVEL-10A**

If this Radley tool fails due to a defect in material or workmanship within three years from the date of purchase, return it to any Home Hardware store with the original bill of sale for exchange. This warranty does not include expendable parts including but not limited to blades, brushes, belts and light bulbs.

This warranty covers defects in material or workmanship only. It does not cover normal wear and tear, failure due to abuse/misuse, or defects caused by careless or accidental mishandling. If this Radley product is used for commercial or rental purposes, this warranty does not apply.

12" ELECTRIC SNOW SHOVEL - 10A



Radley®

RADLEY TOOLS
ST. JACOBS, ONTARIO N0B 2N0
© 2026 Home Hardware Stores Limited
1-866-349-8665
Customer Service/Tech Support

5554-518

Made in China

**3 Year
warranty**

This Radley® product carries a three (3) year LIMITED warranty against defects in workmanship and materials. See Owner's Manual for full details.



**READ ALL INSTRUCTIONS BEFORE FIRST USE.
KEEP THIS MANUAL FOR FUTURE REFERENCE.
KEEP AWAY FROM CHILDREN.**



**WEAR CSA APPROVED
EYE PROTECTION**



**WEAR EAR
PROTECTION**



**WEAR FACE
PROTECTION**