


# Classic<sup>TM/MC</sup>

## Compact Refrigerator White Finish

3.5 cubic feet / 0.1 cubic meters

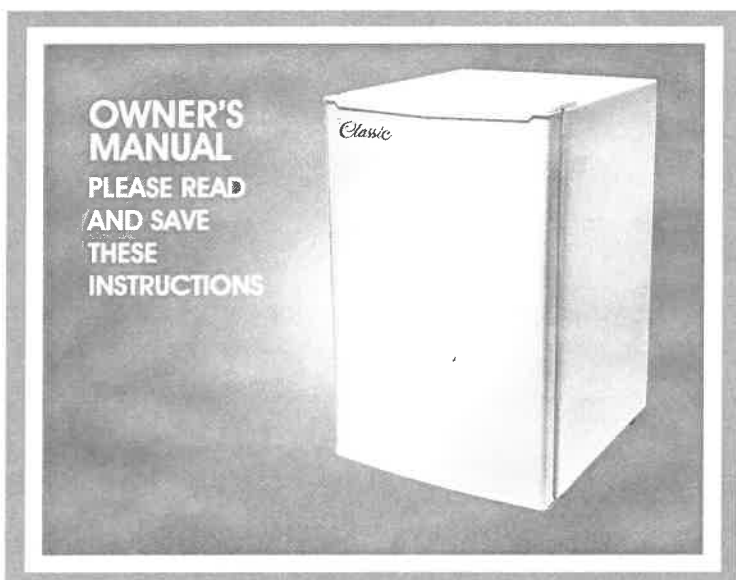

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons or property.

Read all instructions before using this appliance.

1. This appliance must be grounded. Connect only to properly grounded outlet.
2. Install refrigerator using these installation instructions.
3. To protect against electric shock, do not place cord, plug or refrigerator in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
6. This appliance should be serviced only by qualified service personnel.
7. Do not cover or block any opening or air vents on this appliance.
8. Do not store this appliance outdoors.
9. Do not locate this appliance near heat sources or open flames.
10. Do not use or store gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
11. Do not place heavy objects or magnetic items on top of the refrigerator.
12. The refrigerant of this product is R600a, which is inflammable. Make sure not to damage the cooling system during the transportation and installation.
13. To minimize the risk of possible ignition due to improper service or the use of incorrect parts, this unit must be serviced by factory authorized personnel only.

### DANGER! RISK OF CHILD ENTRAPMENT

#### BEFORE YOU DISPOSE OF YOUR REFRIGERATOR:

1. Take off the doors.
2. Leave the shelves in place so that children may not easily climb inside.

### GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded 115V/60Hz.

#### WARNING: Improper use of grounding can result in a risk of electrical shock

If it is necessary to use an extension cord, use only a three wire extension cord that has a three blade grounding plug, and a three slot receptacle that will accept the plug on the appliance. The marked electrical rating of the extension cord should be equal to or greater than the rating of the appliance.

### INSTALLATION INSTRUCTIONS

1. Before using the refrigerator for the first time, remove all packing materials, including the foam base and adhesive tape holding the accessories in place.
2. The refrigerator should be located on a firm, flat surface that is strong enough to support the refrigerator when it is fully loaded.
3. Choose a location that is not exposed to direct sunlight, high temperatures, heat sources such as a stove or radiator, or in a moist area. Do not choose a location where the temperature will go below 13° C / 55° F as this could cause the refrigerator to not function properly.
4. Leave a minimum of 1/2" between each side of the appliance and the wall. The top and back of the appliance should have a minimum of 1 1/2" clearance. This allows for proper air circulation. This appliance is intended to be free standing and should not be built-in or placed in a recessed area.
5. The refrigerator legs must be adjusted during installation in order to function properly. The leveling legs on the front corners can be adjusted by turning clockwise to raise the appliance, counterclockwise to lower it. Be sure to have the appliance slope slightly backward to ensure that the door closes tightly.

### OPERATING INSTRUCTIONS

1. Allow the refrigerator to stand upright for four hours before using.
2. Plug into a grounded outlet or appropriate extension cord.
3. The temperature of the refrigerator can be controlled manually by the control dial. Setting number 1 is the warmest setting, while setting number 7 is the coldest. The first time you turn the unit on, set the dial on number 4 and allow 24 hours for the refrigerator to reach this temperature. If a colder or warmer temperature is desired after this period, use the dial to adjust to the temperature that best meets your needs. Please note that moving the dial to OFF stops the cooling but does not turn the power off.
4. Food should be kept in sealed containers to prevent odours or drying.
5. Hot food should be cooled down before placing into the appliance to prevent increase in interior temperature and power consumption. Placing food inside too soon will impact the performance.
6. Reducing the frequency of door opening can lower power consumption.

### CLEANING

#### INTERIOR

Clean the interior of the appliance with a mixture of warm water and baking soda, using about 1-2 tablespoons per quart of water. Use a sponge or soft cloth and be sure to wring excess moisture out before cleaning around the controls. Rinse thoroughly with warm water and dry with a clean soft cloth.

#### EXTERIOR

The exterior surface can be cleaned using warm water and a mild detergent. Rinse thoroughly and dry with a clean soft cloth.

#### DOOR GASKET

The door gasket must be kept clean to ensure a proper seal. Be sure to clean the gasket frequently, with warm water and mild detergent.

## DEFROSTING

Frost buildup on the walls of the freezer section will increase energy consumption and reduce the efficiency of the appliance. Defrost the freezer section whenever the frost reaches a thickness of ¼".

1. Remove the food and ice cube tray from the refrigerator and freezer compartment.
2. Turn the unit off and unplug it from the outlet.
3. The defrosting process can take several hours. Open the door to speed up the process.
4. When defrosting is completed, wipe the compartment with a soft cloth to remove any remaining water.
5. Reset the refrigerator temperature, following the operating instructions.

### ATTENTION:

Do not use sharp or pointed objects to remove frost or ice from the surfaces of the freezer compartment. This can cause damage to the compartment walls and cooling coils, and will void the warranty.

## POWER FAILURE

When a power failure occurs, the refrigerator can normally store food for several hours. Do not put additional food into the appliance during a power failure, and do not open door. Disconnect the plug from the outlet and reconnect when the power has been restored. **Always inspect for, and discard, any spoiled or thawed food in the refrigerator or freezer before resuming use of the appliance.**

## MOVING THE REFRIGERATOR

1. Turn off the refrigerator and unplug from the outlet.
2. Remove all food and securely tape down all loose items inside.
3. Tape the door shut.
4. Do not lift or pull the door or door handle during transportation.
5. When moving, the appliance can not be tilted over 45° as possible damage to the sealed system could occur.
6. Take care to avoid strong vibration or impact to the appliance.

## REVERSING THE DOOR

1. Remove top hinge cover and three top hinge screws which are below it. Then remove top hinge.
2. Remove one cabinet plug and one door handle plug.
3. Remove the door.
4. Remove right and left levelling legs.
5. Remove the bottom hinge and three bottom hinge screws.
6. Install the bottom hinge on the other side of the levelling legs with three bottom hinge screws.
7. Install right and left levelling legs. There are two holes below the refrigerator to fit the two levelling legs.
8. Install the door.
9. Install the top hinge on the other side with three top hinge screws.
10. Install top cover above the top hinge and install one cabinet plug and one door handle plug on the other side.
11. Adjust the levelling legs.

**Do not tilt the appliance over 45° when reversing the door as possible damage to the sealed system may occur.**

## REPLACING INTERIOR LIGHT

Remove the cover to replace burnt out light (120V/10W): Move the lampshade 1-2" in the direction on cover. Take off the lampshade. Remove bulb. Replace bulb and reinstall shade.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Refrigerator does not operate.	Not plugged in.	Unplug, wait 10 seconds, then plug in again.
	Tripped circuit breaker or blown fuse.	Replace fuse or reset circuit breaker.
	Problem with electrical outlet.	Consult with a professional electrician.
Refrigerator seems too warm - food does not seem cool.	Temperature setting may be too warm.	Lower the temperature setting.
	Door opened too frequently.	This is normal.
	Door not closed tightly.	Check to make sure nothing inside is causing the door to not close.
Compressor runs too long, or cycles on and off frequently.	Warm weather.	This is normal.
	Hot weather.	This is normal.
	Door opened too frequently.	This is normal.
Moisture forms on the outside of the appliance.	Door not closed tightly.	Check to be sure nothing inside the refrigerator is preventing the door from closing.
	Temperature control set at coldest setting.	Adjust temperature to a warmer setting.
	Large amounts of food placed in refrigerator.	This is normal.
Moisture forms on the inside of the appliance.	This is normal during periods of high humidity.	Wipe the surface dry using a soft cloth.
	The door is slightly open.	Close the door tightly.
Moisture forms on the inside of the appliance.	This is normal during periods of high humidity.	This is normal.
	Door is opened too long or too frequently.	Do not open the door too long or too frequently.
Vibration noise.	Refrigerator is on an uneven surface.	Adjust the levelling legs.
	Refrigerator is touching a wall.	Move the refrigerator away from the wall.

## Classic™

### ONE YEAR WARRANTY - VALID ONLY WITH ORIGINAL PURCHASE RECEIPT

**WARRANTY:** Home Hardware Stores Limited warrants this product against defects in any parts or workmanship for a period of 1 year from the original purchase date. This product is for residential use only. It is not intended to be used in commercial or industrial settings. This product warranty covers only the original consumer purchaser of the product.

**WARRANTY COVERAGE:** This warranty is void if the product has been damaged by accident, neglect, improper handling or operation, shipping damage, abuse, misuse, unauthorized repairs made or attempted, alterations, improper assembly/installation or maintenance, commercial use or other causes not arising out of defect in materials or workmanship. This warranty does not extend to any units which have been altered or modified or to damage to products or parts there of which have had the serial number removed, altered, defaced or rendered illegible. Return to the closest Home Hardware store for inspection and/or replacement.

**IMPLIED WARRANTIES:** Any implied warranties which the purchaser may have are limited in duration to 1 year from the date of purchase. This limited warranty is in lieu of all other warranties expressed or implied, including warranties of merchantability and fitness for a particular purpose and excludes all liability for incidental or consequential damages for any cause whatsoever.

**HOME HARDWARE STORES LIMITED**  
MADE IN CHINA / FABRIQUÉ EN CHINE  
ST. JACOBS, ONTARIO N0B 2N0  
**ORDER ONLINE / COMMANDE EN LIGNE**  
**homehardware.ca**  
3760W144

© 11 / 2014 Home Hardware Stores Limited

**WARRANTY PERFORMANCE:** During the above 1 year warranty period, a product with a defect will be replaced when the product is returned to an authorized dealer. The replacement product will be in warranty for the balance of the 1 year warranty period and an additional one month period. No charge will be made for such replacement.