

MATERIALS:


2 x 6 x 8' cedar boards (9)
corner brackets (3 packages) 5010-024
#8 x 1 1/4" green square drive deck screws (100 pack) 2183-299
exterior finish

STEP 1:

Cut 6 boards to 90" long and cut 6 boards to 36" long.
Apply an exterior grade finish to all surfaces of each board. Allow the boards to dry completely.


STEP 2:

Slide each pair of brackets over the board ends that will make up each corner.

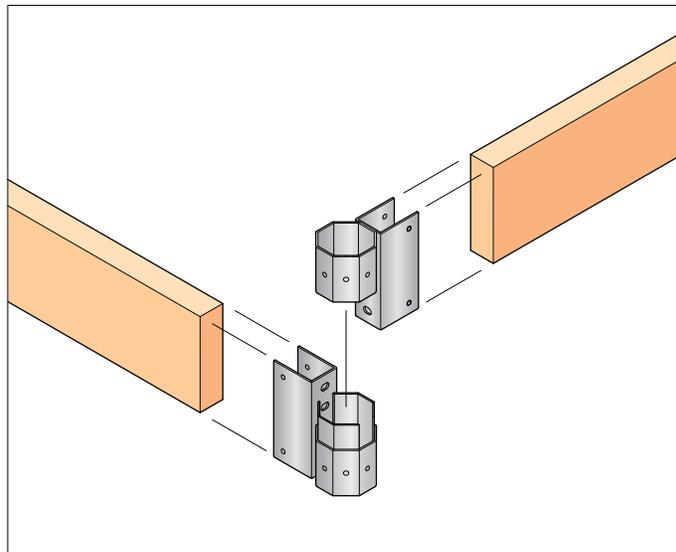


STEP 3:

Fasten the brackets to the boards with 1 1/4" exterior screws. For extra strength, drive screws in on both sides of the brackets.

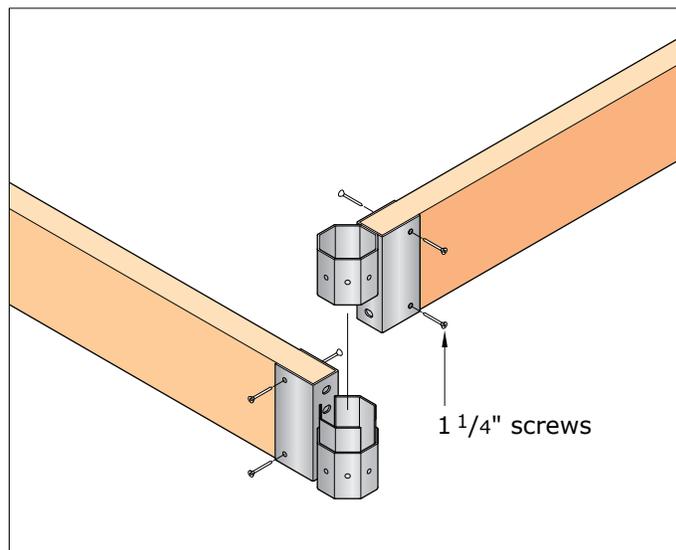


STEP 3:

Snap the pairs of corner brackets into each other. The brackets will add about 3" to both ends of the boards.

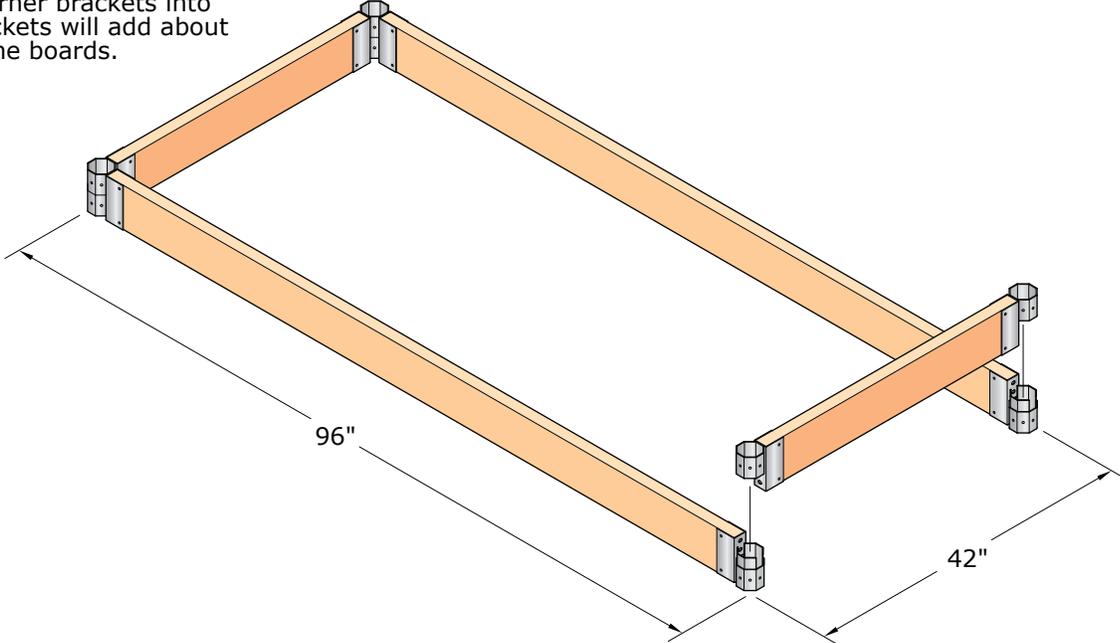

STEP 4:

To add another layer of boards and brackets, put a stacking joint into the top of each bracket assembly.

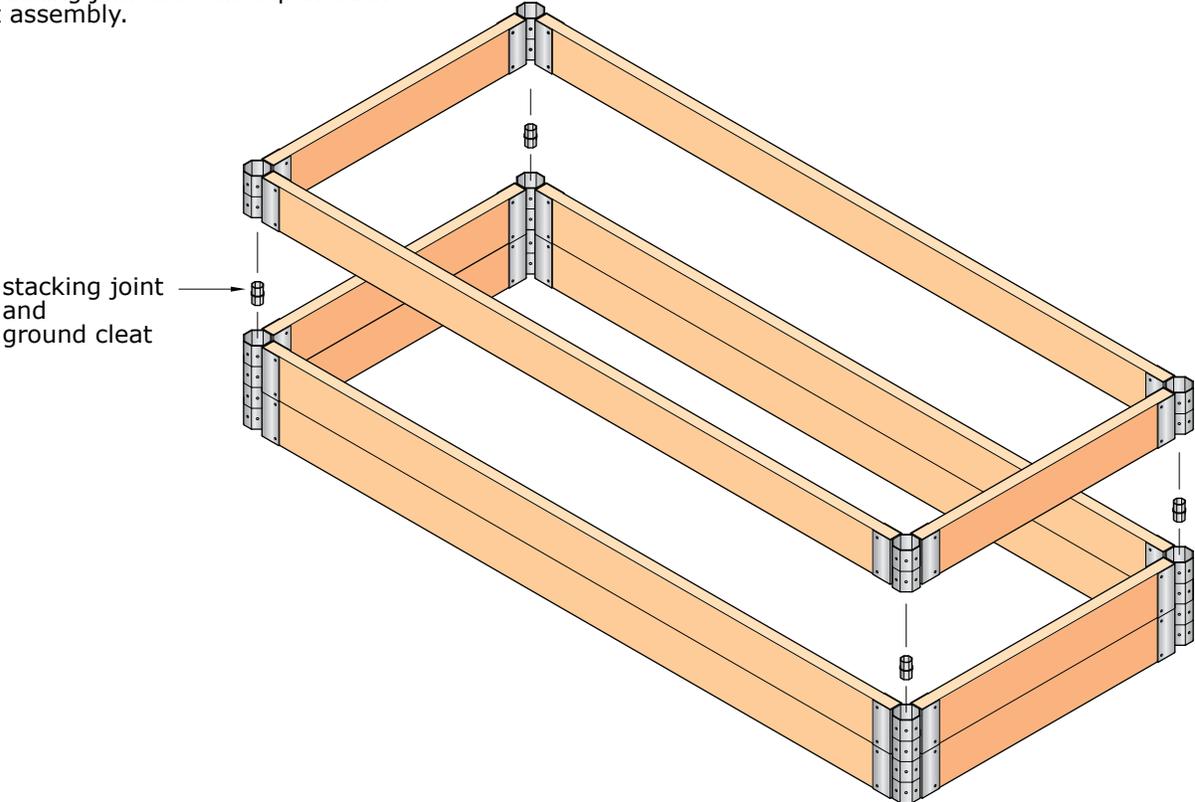

STEP 5:

To finish the tops of the corner brackets, snap a decorative top cap into the top of each corner.

